

REMINGTON RECHARGE

CLEANSES SKIN : SOFTENS STUBBLE



FC2000

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.remington.co.uk/productregister
You must register within 28 days
of purchase.



NORMAL

Everyday deep cleansing to remove impurities and energise the skin.



SKIN & STUBBLE

Cleans deep into stubble to soften skin and facial hair.




PRE-SHAVE

Invigorating massage action softens stubble and prepares the skin for shaving.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Do not twist or kink the cable, and don't wrap it around the appliance.
- 5 Store the product at a temperature between 15°C and 35°C.
- 6 Do not use attachments other than those we supply.
- 7 Make sure the power plug and cord do not get wet.
- 8 Do not plug or unplug the appliance with wet hands.
- 9 Keep the charger away from water and heated surfaces
- 10 This appliance is not intended for commercial or salon use.
- 11 Use only as instructed.
- 12 This facial brush is designed for wet use and may be used in the shower. **DO NOT** fully submerge in water. 
- 13 After use the appliance should be cleaned to avoid the accumulation of grease and other residues.
- 14 This appliance should be supplied with approved safety isolating adaptors PA-0510E (for Europe) and PA-0510U (for United Kingdom) with the output capacity of 5.0 dc; 1A (adaptor output).

GETTING ACQUAINTED WITH THE RECHARGE FACIAL BRUSH

- The RECHARGE Facial Brush has been designed and developed for cleansing the face, stubble and neck.
- The rotating and vibrating bristles gently provide a deep cleanse to remove impurities leaving the skin feeling clean with smoother skin and softer stubble.
- The RECHARGE Facial Brush includes 3 Brush Heads for all your skin needs:
- **NORMAL:** Everyday deep cleansing to remove impurities and energise the skin. This is ideal for everyday skin cleansing of normal or combination skin.
- **PRE-SHAVE:** Invigorating massage action softens stubble and prepares the skin for shaving. This attachment is ideal for softening stubble and is best used with a generous amount of cleanser applied to the skin or brush head.
- ★ **TIP:** You can also use this attachment to apply your shaving gel/cream prior to wet shaving.
- **SKIN AND STUBBLE:** Cleans deep into stubble to soften skin and facial hair.
- ★ **TIP:** Use this if you have stubble or a short beard.

- ★ An alternative brush is available for sensitive skin (SP-FC8). Please contact your service centre for more information.

WARNINGS AND SAFETY PRECAUTIONS

- ★ Before you start using the RECHARGE Facial Brush, be sure to read all the warnings and safety information to check the product is suitable for you.
- 1 Avoid using on the delicate skin around the eyes.
 - 2 DO NOT use the facial brush on the same area more than twice a day.
 - 3 DO NOT use the facial brush on areas with open wounds, sunburnt skin, chapped or irritated skin.
 - 4 DO NOT use if you suffer from skin diseases or skin irritations such as severe/active acne or skin infection.
 - 5 DO NOT use if you are taking steroid-based medication.
 - 6 DO NOT use the facial brush with face washes containing harsh chemicals or rough particles.
 - 7 If you wish to share this product with other users, for hygiene reasons, ensure you change the brush head. DO NOT share brush heads between multiple users.
 - 8 If you experience any pain or discomfort, stop using this product and contact your doctor.

KEY FEATURES



 
- 1 Normal Brush Head
- 2 LED Indicator Lights
- 3 On/Off and Speed Selection Switch
- 4 Facial Brush Handle
- 5 Charging Stand
- 6 Skin and Stubble Brush
- 7 Pre-Shave Attachment
- 8 Travel Pouch
- 9 Protective Cap (not shown)
- 10 Power Adaptor (not shown)

GETTING STARTED

Be patient when first using your RECHARGE Facial Brush as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your Facial Brush, as we are confident you will receive years of enjoyable use and complete satisfaction.

◆ INSTRUCTIONS FOR CHARGING

- 1 Always ensure that your hands, facial brush and mains adaptor are dry before charging.
- 2 Before using for the first time, fully charge the Facial Brush. One full charge will take 6 hours.
- 3 Ensure the appliance is switched off.
- 4 Insert the charging adaptor into the charging stand Fig. 1.

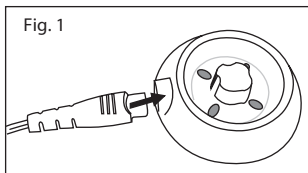

- 5 Plug the adaptor into the wall socket.
 - 6 Place the Facial Brush on the charging stand.
 - 7 The charging indicator lights will glow in a rotating sequence whilst the facial brush is charging.
 - 8 When the Facial Brush is fully charged, all charging indicator lights will remain illuminated.
 - 9 One full charge will take 6 hours.
 - 10 One full charge allows up to 30 minutes of cordless usage time (30 x 1 min uses).
- ✱ NOTE: If the battery charge is low, all three LED lights will pulse on and off whilst in use.


✱ QUICK CHARGE FUNCTION

- The facial brush is also equipped with a quick charge function.
- To utilise this function, charge the Facial Brush for 30 minutes.
- This will provide approximately 4-6 uses.

◆ INSTRUCTIONS FOR USE

- This product is suitable for wet use and may be used in the shower.
- DO NOT submerge in water.
- The charging stand and adaptor can not be used in a bath or shower.
- The Facial Brush has 3 speed settings and comes with 3 brush heads.
- Always choose the speed setting and brush head most comfortable for you.


- ✱ NOTE: If you suffer from sensitive skin, we recommend selecting speed setting 1 for the first few uses. If you do not experience any skin reactions then speeds 2 and 3 may be used.
- The Facial Brush also comes equipped with a one minute timer to help ensure thorough cleansing of the whole face. We recommend cleansing in 3 sections: T-Zone (1), Right side (2) and Left side (3) Fig. 2.

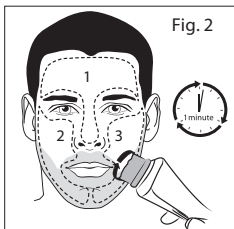


- The facial brush will gently pause every 20 seconds to indicate when to move to the next zone.
- The facial brush will automatically switch off after 60 seconds to indicate the end of the brushing time.
- ✱ NOTE: If you change speed settings during use, the timer will set back to zero and the timer will start again.

HOW TO USE

- 1 Select the brush head to suit your skin needs. Gently push the brush head onto the facial brush handle until you hear a click. Fig. 3.
- 2 Moisten the brush bristles by running under water.
- ✱ NOTE: DO NOT use the facial brush whilst completely dry as this can cause skin irritation.
- 3 Dampen your skin with water and apply face wash onto your skin. Alternatively, apply your face wash directly onto the brush.
- ✱ TIP: If you are using the pre-shave attachment, apply a generous amount of face wash directly to the brush head.
- 4 Switch on using the On/Off button.
- 5 Select the speed:
 - The facial brush will automatically start on speed 1.
 - Press the button again for speed 2.
 - Press the button again twice for speed 3.

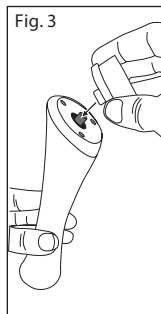


- ✱ TIP: When changing brush heads, test each head on different speeds to identify which is most comfortable for you.
- 6 Place the facial brush directly onto your skin.
- 7 Gently glide the brush over the skin and beard in circular motions avoiding the delicate eye area Fig. 4. When you feel a pause, move to the next area.

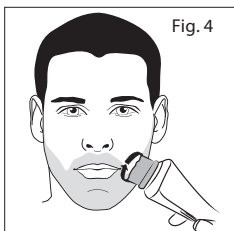

- ✱ NOTE: Try to avoid applying too much pressure with the brush when directly on the skin. If this happens the brush will automatically stop its cycle and switch off. This is perfectly normal and helps to ensure a comfortable use. The facial brush can be restarted by pressing the On switch.



- If you wish to end use before the full 60 seconds press the On/Off button as per below:
- When using speed 1, press On/Off button 3 times
- When using speed 2, press On/Off button twice
- When using speed 3, press On/Off button once
- When not in use, store the brush attachments with the protective caps on Fig. 5.
- Ensure the bristles are dry before attaching the protective cap.

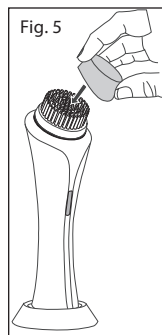

👁️ REPLACING THE BRUSH HEADS

✱ Removing the brush head:

- Hold the brush handle with one hand.
- With the other hand, gently pull the brush head upwards until it comes off Fig. 6.
- To replace the brush head, gently push the head back on until you hear a click Fig. 7.

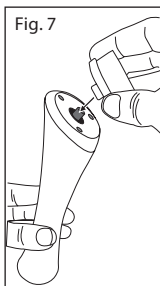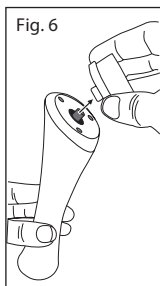

- For best results, we recommend replacing all brush heads approximately every 3 months.
- Replacement Brush Heads are available:
- Normal: SP-FC5
- Skin and Stubble: SP-FC6
- Pre-Shave: SP-FC7
- Sensitive: SP-FC8
- Contact your nearest Remington service centre for more information.

CLEANING AND MAINTENANCE

- To ensure long lasting performance of your facial brush, clean the brush head and the handle regularly.
- Ensure the facial brush is switched off before cleaning.
- DO NOT attempt to clean any part of this product in a dishwasher.
- DO NOT submerge the brush handle or charging stand in water.
- Brush Head: Rinse the brush head and bristles after each use.
- Brush Handle: To clean the handle, wipe with a damp cloth.
- Charging stand: Wipe with a damp cloth.
- ★ CAUTION: Ensure all parts are dry before connecting the charger into a wall socket.

BATTERY REMOVAL

- The battery must be removed from the facial brush before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.

- To remove the rechargeable battery:
- Run the facial brush until the motor stops.
- Remove brush head.
- Remove the two screws at the base of the handle.
- Using a small screwdriver, pry the top cap off the handle.
- Pry the battery from the internal assembly.
- Dispose of the battery safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0345 6460 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. FC2000

15/UK/ FC2000 T22-0003278 Version 04 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI