
Nuvita 1082 STERICOMPACT - Compact Steam Steriliser

IMPORTANT SAFEGUARDS

- Ensure that the supply voltage marked on the appliance corresponds with your mains supply.
- If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
- Do not allow children aged less than 3 years to touch or use the appliance and its cord. The appliance becomes very hot and the steam can cause severe scalding.
- Do not move the appliance when it is in use or contains hot liquids.
- Do not place the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
- Unplug the appliance from the power supply before cleaning or storage.
- Do not immerse the supply cord, plug or base unit in water or any other liquid. If appliance is accidentally dropped in water do not recover without first unplugging the power cord from the power socket.
- This appliance does not contain any user serviceable parts inside. Do not dismantle.
- This appliance is for indoor household use only. Do not use outdoors. Do not use in areas with a high moisture content (example: bathrooms).
- This appliance is not intended to be used by people, including children, with
 physical disabilities, sensory and mental disabilities, or lack of experience or
 knowledge unless they are properly educated and trained to use the appliance by a competent person and responsible for their safety.

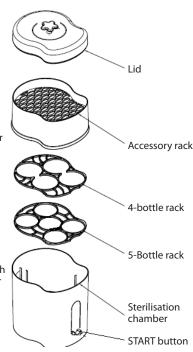

OPERATING INSTRUCTIONS

Before placing items in the appliance for sterilization it is important that all bottles, teats and accessories are empty and that they are cleaned and fully rinsed in fresh water.

- Place the steriliser on a flat surface where it is out of reach of children and it will not be knocked or moved during operation.
- Remove the accessory rack and lid from the steriliser chamber.
- Pour an approximate 70ml of pure water into the sterilization chamber.
- Place the 5-bottle/4-bottle rack into the sterilization chamber. The ribs of the chamber will stand the rack in position.
- Place the rinsed bottles with their opening facing downward in the bottle rack.
- Lay teats and other accessories in the accessory rack with their opening facing downwards.
- Place the loaded accessory rack securely on the sterilization chamber ensuring that the circumference slot on the underside of the accessory rack fits snugly and securely over the edge of the sterilization chamber.
- · Replace the lid.
- Plug the appliance into the power supply socket.
- Flip the ON/OFF switch (located on the back end of the item) to ON.
- Flip the ON/OFF switch (located on the back end of the item) to ON.
- Switch the device OFF after the sterilisation procedure by flipping the ON/OFF switch back to OFF.

NOTE: To end the sterilisation procedure prematurely or to stop the procedure from starting accidentally, flip the ON/OFF switch to OFF.

Switch the device off after every sterilisation procedure by flipping the ON/OFF switch to OFF.

IMPORTANT

Beware of hot steam from the steam vent. The indicator light and the heater will turn off automatically when sterilization is complete. It is advisable to allow a few minutes for the appliance and its contents to cool before opening the lid. The bottles and other accessories can then be removed.

Always allow the steriliser to cool for at least 20 minutes before the next sterilization.

Switch the device off after every sterilisation procedure by flipping the ON/OFF switch to OFF.

CLEANING INSTRUCTIONS

- Use a soft damp cloth to clean the sterilization chamber.
- The accessory rack, lid and bottle racks are all dishwasher safe and they can be cleaned in hot soapy water.
- Do not use abrasives or solvents for cleaning; they may damage the appliance and the surface of the heater.

DISPOSAL

ELECTRICAL RATING

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Supply voltage 220-240V A/C 50/60Hz Wattage 550W

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back

your old appliance for disposals at least free of charge.

WARRANTY - TERMS AND CONDITIONS

This product benefits of a warranty of 24 months on material and manufacturing defects, starting from the date of purchase (see sales slip).

The warranty of 24 months does not include damages caused by the usual use of parties identified as "consumable" (e.g., batteries, brush heads or parts subject to usury).

The legal guarantee of 24 months is void if:

- The product has undergone aesthetic damage due to improper use not in accordance with instructions in the manual. This product has been modified and/or tampered with.
- The cause of the failure was due to poor maintenance of the individual components and/or accessories and/or
- supplies (e.g. oxidation and/or scaling due to the retention of water or other liquids, sediment blocking the sensor, leak of corrosive liquid from batteries).

The following is excluded from the legal guarantee of 24 months:

- Costs related to replacements and/or repair of parts subject to wear or costs for ordinary maintenance of the product.
- The costs and risks involved in transporting the product to and from the store where you purchased or otherwise authorized collection centre to receive the products under warranty.
- Damage caused by or resulting from improper installation or improper use not in accordance with the directions in the instruction manual.
- Damage due to natural disasters, accidental events or adverse conditions not compatible with the product.
- Defects that have a negligible effect on product performance.

The manufacturer, distributor and all the parties involved in the sale do not assume any liability for losses and economic damage from any malfunction of the product. In accordance with current regulations the manufacturer, distributor and all the parties involved in the sale are not responding in any case for damages, including direct, indirect ones, loss of net income, loss of savings and additional damage and other details consequences going beyond the damage caused by the breach of warranty, contract, strict liability, wrongdoing or due to other causes, resulting from the use or inability to use the product and/or paper and electronic documents, including the lack of service.

For further information on the help service visit the website www.nuvitababy.com

