



Einhell

CLASSIC



Cordless Lawn Trimmer

GC-CT 18/24 Li P (1x1,5Ah)

Item No.: 3411102

Ident No.: 11017

Bar Code: 4006825626575

The Einhell GC-CT 18/24 Li P (1x1.5Ah) cordless grass trimmer is the ideal helper for bringing the garden and strips of grass into shape. Equipped with an 18 V / 1.5 Ah lithium-ion battery from the Power X-Change series, the grass trimmer has an operating time of up to 40 minutes. 3 LEDs show the charge status at a glance. The rechargeable battery can also be used in all other devices from the system series. For comfortable working without fatigue there is an additional handle for two-handed operation. The housing and the secondary handle are made of impact-proof, high-grade plastic. The cutting width is 24 cm with a speed of 8,500 rpm. Complete with one 1.5 Ah PXC rechargeable battery, one PXC charger and 20 plastic blades.

Features & Benefits

- System accu - Power X-Change battery
- Battery capacity indicator with 3 LEDs
- Accu can be used for all the tools in the Power X-Change family
- System charger included
- Incl. 20 plastic blades
- User-friendly two-hand operation thanks to additional handle
- Housing and handle made of impact-resistant, high-grade plastic

 
 


Technical Data

- Accumulator 18 V | 1.5 Ah | Li-Ion
- Max. running time 40 min
- Charging time 2h
- Revolutions of knife 8500 rpm
- Cutting width of knife 24 cm
- Number of accumulators 1 Pieces

Logistic Data

- Product weight 1.57 kg
- Gross weight single packaging 2.45 kg
- Dimensions single packaging 490 x 155 x 182 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 10.5 kg
- Dimensions export carton 540 x 350 x 400 mm
- Container quantity (20"/40"/40"HC) 1280 | 2640 | 3168

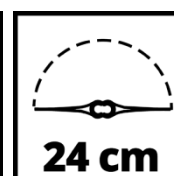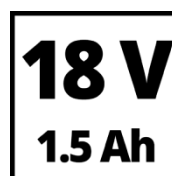

Available as special accessories



18V 1,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,6Ah P-X-C Plus
Battery
Item No.: 4511436
Bar Code: 4006825616590
Einhell Accessory



18V 3,0 Ah Power-X-Change
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 30min Power-X-Change
PXC-Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory