



Visit us at www.woodzeez.com

Honeysuckle Hillside Cottage™

Assembly Instructions

Getting started

Batteries not included.

Battery installation


Instructions: Requires 3 x AAA (LR03/R03) 1.5V batteries.

Adult installation required

1. Locate the battery compartment on the bottom of the cottage.
2. Use Phillips head screwdriver (not included) to loosen the screws.
3. Install 3 new AAA (LR03/ R03) 1.5V batteries following the diagram inside the battery box.
4. Place the battery cover back on and tighten the screws to secure cover.

REPLACING BATTERIES - 3 AAA (1.5V) batteries not included.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

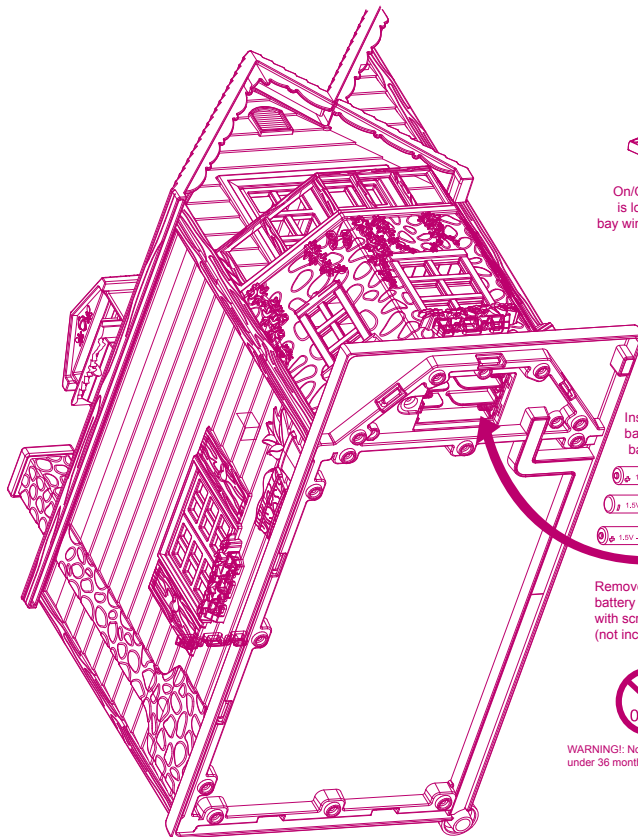

On/Off switch is located at bay window alcove

Insert 3AAA 1.5V in the battery box and screw the battery cover back.

1.5V - AAA

1.5V - AAA

1.5V - AAA

Remove the battery cover with screwdriver (not included)



WARNING! Not suitable for children under 36 months due to small parts.



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Adult assembly required.