



6. WIRED SETUP 2/2

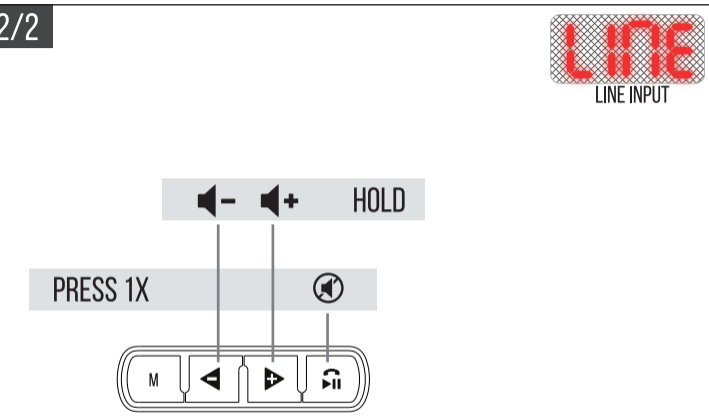

LINE
LINE INPUT

7. PLAY USB OR SD CARD

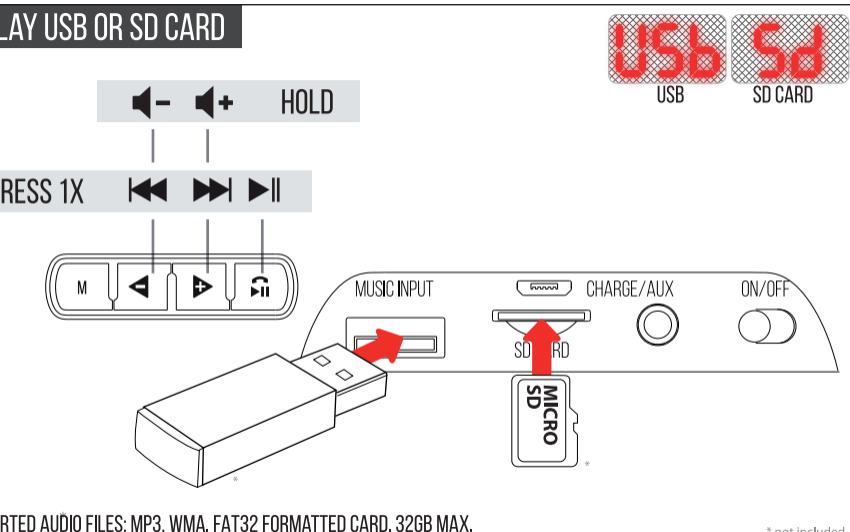


USB
USB

SD
SD CARD


SUPPORTED AUDIO FILES: MP3, WMA. FAT32 FORMATTED CARD. 32GB MAX. * not included

8. PHONE CALL

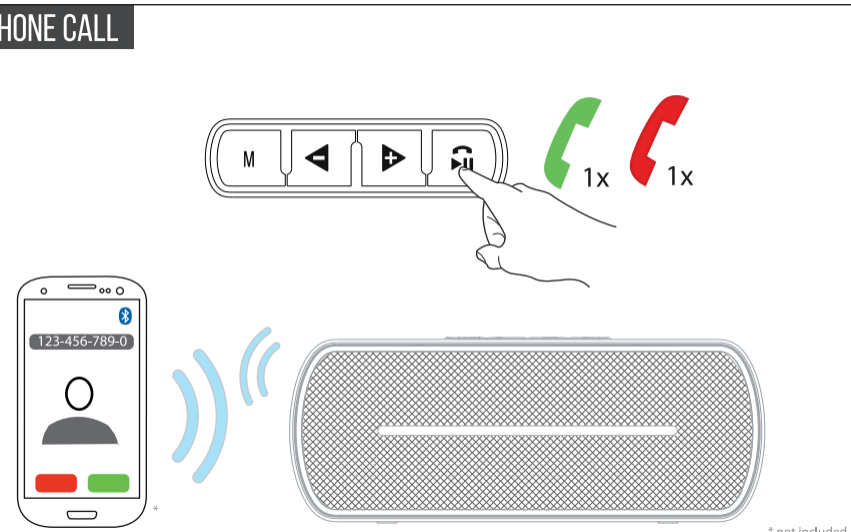

* not included

9. HEADPHONE

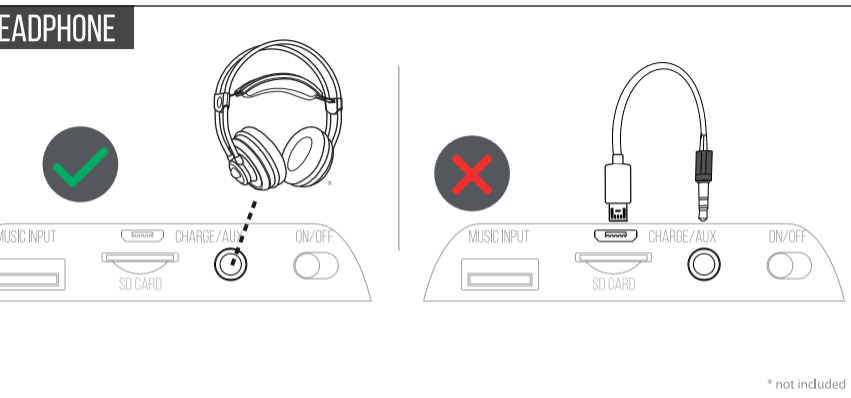

FAQ

FREQUENTLY ASKED QUESTIONS
[HTTP://WWW.TRUST.COM/21704/FAQ](http://www.trust.com/21704/faq)

Trust International BV - Laan van Barcelona 600 - 3317DD, Dordrecht, NL © 31-08-2016 Trust All rights reserved.

Trust
URBAN



[USER GUIDE]
WIRELESS SPEAKER

1. CHARGE SPEAKER

USB

MUSIC INPUT CHARGE/AUX ON/OFF
SD CARD

* not included

2. WIRELESS SETUP 1/2

bt BLUETOOTH

bt - bt - BLUETOOTH PAIRING
bt bt bt bt BLUETOOTH PAIRED

MUSIC INPUT CHARGE/AUX ON/OFF
SD CARD

3. WIRELESS SETUP 2/2

① Settings

② Bluetooth

③ Trust SPK-16

WIRELESS TROUBLESHOOTING

no devices found

6 SEC

Trust SPK-16

4. PLAY MUSIC WIRELESS

← - + → HOLD

PRESS 1X ⏪ ⏩ ⏸

M Trust

5. WIRED SETUP 1/2

LINE INPUT

①

②

③ M

MUSIC INPUT CHARGE/AUX ON/OFF
SD CARD

* not included