



Remove all packaging ties before giving this toy to a child.

Make sure the windshield is fully upright and slotted in the right position



User Guideline


A) FM (88-108Mhz) Radio reception is very dependent on geographic location; this product is designed for use in regions with adequate radio reception, and is not intended for regular radio use.

B) If abnormal sounds are produced, push car's bottom power switch to "OFF" for 2 seconds and then push back to "Play".

C) Driver seat may be permanently stained if in contact with marker, pen, crayon, paint, dark-colored doll outfits, or similar objects for long periods.

D) For cleaning, use clean and soft damp cloth to remove dust on car. Do not use rough cloths or strong cleaning detergent as this will cause permanent surface damage to the car.

E) Please read this instruction sheet carefully and keep it for future reference.

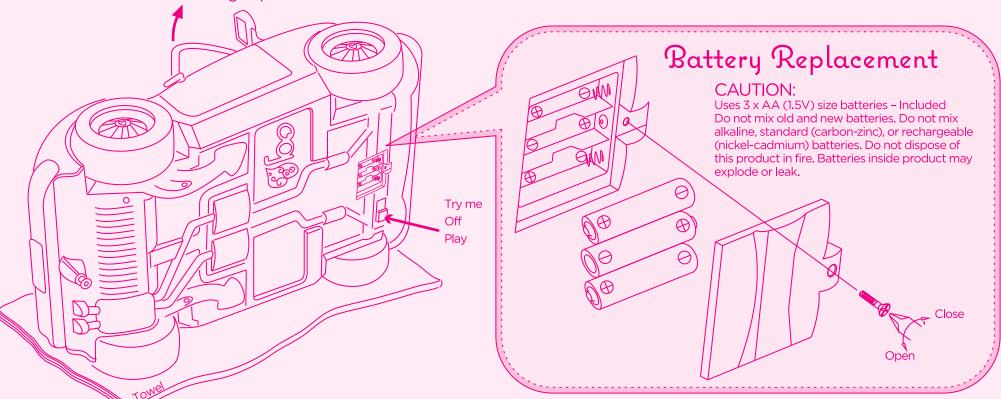

Attention: Please keep the packing materials and screws away from children.

