

## Troubleshooting

- If the Boombox is experiencing distorted or fuzzy sound, check the batteries. They are most likely weak and need to be replaced with 3 brand new "AA" batteries. If the unit still does not work after changing the batteries, then take them out and make sure you have installed them properly. We recommend alkaline batteries.
- In the event of interrupted operation, use the extended wire of a paperclip or other thin tool to press in the Reset button located on the back of the unit.
- If the trouble persists, **DO NOT ATTEMPT TO REPAIR THE UNIT. See warranty for factory services.**

## Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**. Please also visit our website: [www.kiddesigns.com](http://www.kiddesigns.com)

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

## Limited One Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS (867-8697) to obtain a Return Authorization Number and shipping instructions.

### Disclaimer of Warranty

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will KIDdesigns or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your KIDdesigns product.

© 2014 KIDdesigns, Inc. All Rights Reserved.

Questions? Visit [www.kiddesigns.com](http://www.kiddesigns.com)

or call 1-888-TOP-TOYS

© Disney

Visit [www.Disney.com](http://www.Disney.com)

Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024

eKids is a wholly owned subsidiary of KidDesigns, Inc.

1299 Main Street Rahway NJ 07065

Printed in China

FR115-051214-A

Disney  
**FROZEN**

Model: FR-115

**Cool Tunes**  
Sing-Along Boombox



### Important Message to Customers

Thank you for purchasing one of Disney's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain to the child the safe and proper way to use this toy, and to help give it the long-lasting life that Disney products are designed for.

**Keep these instructions for future reference as they contain important information.**

## Installing the Batteries

1. Using a Phillips screwdriver, open the battery compartment door located on the back of the unit.
2. Insert 3 new AA (R6) batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
3. Replace battery compartment door. Do not overtighten screw.

### Battery Use Cautions and Tips for Safety & Best Performance

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

### Remove Demo Tab

The Boombox has a demo tab for in-store demonstration purposes. Make sure to remove this tab. To do so, gently pull on tab. Dispose of tab properly.

 
 
 
### Song Credits

Let It Go  
Words and Music by Robert Lopez and Kristen Anderson-Lopez  
© 2013 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.  
Performed by Demi Lovato  
Courtesy of Walt Disney Records

In Summer  
Words and Music by Robert Lopez and Kristen Anderson-Lopez  
© 2013 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.  
Performed by Olaf  
Courtesy of Walt Disney Records

For The First Time In Forever  
Words and Music by Robert Lopez and Kristen Anderson-Lopez  
© 2013 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.  
Performed by Anna  
Courtesy of Walt Disney Records

## Battery Installation

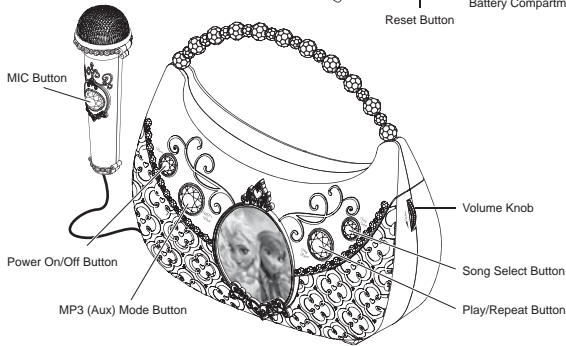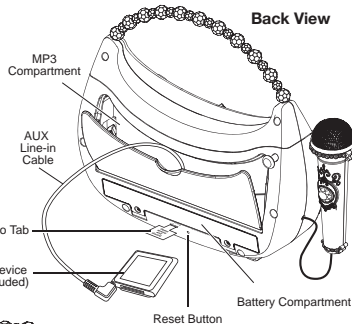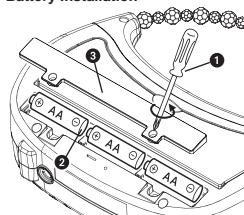

## Using the Microphone

Pull UP on the mic to release it from the post on the back of the unit. To return the mic, position it with the large hole over the post, then press downwards on the mic to secure it.

**Be relaxed and ready to sing!** Press the button on the microphone while singing or speaking. Release button to mute microphone.

**TIP:** To avoid feedback (unpleasant squealing or howling sound), do not point the mic towards the speaker.

## Power On/Power Off

1. When the unit is off, press the **Power On/Off Button** to turn the unit on.
2. You can turn off the unit at any time by pressing the **Power On/Off Button**.

## Playing a Song

1. You can select the pre-recorded song you want to sing along to by pressing the **Song Select Button** to cycle to the desired song.
2. Press the **Play/Repeat Button** to play the selected song.
3. Use the Microphone to sing along (press the **MIC Button**).
4. To repeat the same song once it finishes playing, just press the **Play/Repeat Button** again.

## Volume Adjust

Move the **Volume Knob** on the side of the unit to adjust the song volume. The mic volume is preset and does not adjust.

## Using the AUX Line-in Cable

Use the included AUX Line-in Cable to connect an audio device such as a smartphone, MP3 player, CD player, etc., to the Boombox.

1. Connect the AUX Line-in Cable on the Boombox to the line out or headphone jack of your audio device. Press the **MP3 Mode Button**.
2. Turn on your audio device and put it in play mode.
3. Press the **MIC Button** to sing along to the song played from your MP3 player or other connected device.
4. MP3/Aux mode will automatically turn off in about 15 minutes to save power.
5. Press the **MP3 Mode Button** to activate the mode again.

## Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.