

Warranty Information

This product has a limited 1 year warranty in North America and Australia.
For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.

本产品自购买之日起，于中国地区（不包含澳门，香港特别行政区）享有一年有限质保（部分产品为二年，三年或五年）。
详细质保年限请参照官方网站 <https://silverstonetek.com.cn/> 公布之产品型号为依据。

Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty.
Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
a) Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
b) Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
c) Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
d) Warranty mark/stickers are not removed or broken.
Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>.
Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)

SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.
<http://silverstonetek.com/contactus.php>

For Australia only (support@silverstonetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.
You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Jiansong Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238
(standard international call charges apply)

For Europe (support.eu@silverstonetek.de)

For China (support@silverstonetek.com.cn)

For all other regions (support@silverstonetek.com)

有毒有害物质/元素及其化学含量表

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电机组件	X	0	0	0	0	0
金属结构件	0	0	0	0	0	0
塑胶结构件	0	0	0	0	0	0
线缆/连接器	0	0	0	0	0	0
介质/其它	0	0	0	0	0	0
包装材料	0	0	0	0	0	0
辅助材	0	0	0	0	0	0

本表格依据SJ/T 11364的规定编制

○：表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。

产品合格证

检验员：检01
生产日期：见产品条码



SilverStone Technology Co., Ltd.

www.silverstonetek.com

All trademarks are registered to their respective owners.

© 2019 SilverStonetek Co., Ltd. All Rights Reserved.

NO.G11235861




SILVERSTONE®

Krypton Series

KR02

High performance CPU cooler

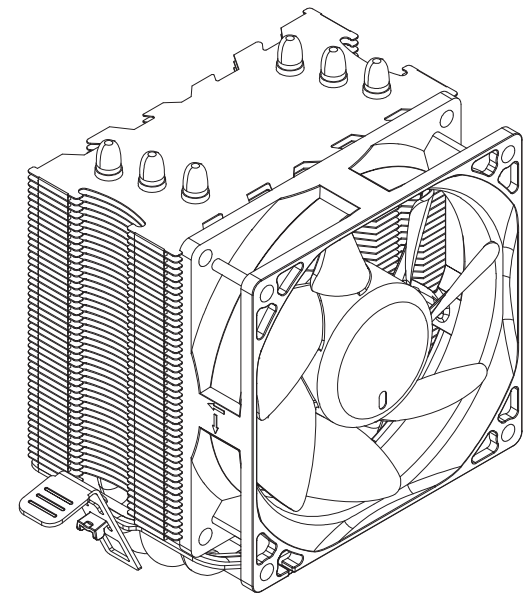

SPECIAL FEATURES

- Advanced silence and performance
- Reroute design on heat-pipe Ø6mm x 3pcs to directly receiving cold air, providing the best cooling performance.
- Staggered heat-pipe arrangement helps to maximize airflow over each heat-pipe for optimal cooling performance
- Includes compact 92mm PWM fan for excellent cooling and low noise
- Universal Socket Compatibility Intel Socket LGA115X/1366/2011/2066 & AMD Socket AM2/AM3/AM4/FM1/FM2

INTRODUCTION

The Krypton series coolers are designed to provide high performance and value for your CPU. The Krypton KR02, at only 125mm high including fan, features three 6mm thick copper heat pipes connect to a copper base designed for Intel / AMD processors. A high quality 92mm PWM fan is included to provide up to 130W* of cooling power. For users requiring great performance in space limited applications, the KR02 is a great choice.

Intel Installation Guide

1

ENGLISH

Confirm the motherboard socket type before installation

DEUTSCH

Vor der Installation Motherboard-Sockettyp überprüfen

FRANÇAIS

Confirmer le type de fiche de la carte mère avant installation

ESPAÑOL

Confirme el tipo de zócalo de la placa base antes de la instalación

ITALIANO

Confermare il tipo di socket della scheda madre prima dell'installazione

ไทย

ตรวจสอบขุมของเมนบอร์ดก่อนติดตั้งและ

РУССКИЙ

Перед тем как приступить к установке, проверьте тип разъема процессора на материнской плате.

繁體中文

安裝前請先確定主機板孔位。

簡體中文


安裝前請先確定主機板孔位。

日本語

インストール前にマザーボードのソケットのタイプを確認してください。

한국어

설치 전에 메인보드 소켓 유형을 확인합니다.

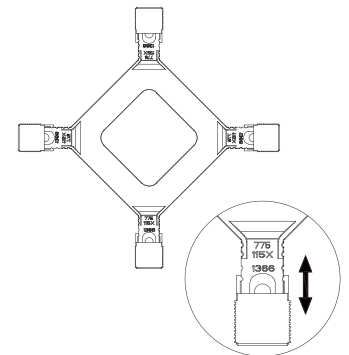

Intel Installation Guide

2

ENGLISH

Please clean the surface of CPU then apply thermal grease evenly on CPU.

DEUTSCH

Reinigen Sie bitte die Oberfläche der CPU bevor Sie die Wärmeleitpaste gleichmäßig auftragen.

FRANÇAIS

Appliquez la graisse thermique fournie uniformément sur la surface du CPU

ESPAÑOL

Por favor, limpie la superficie del microprocesador antes de aplicar la pasta termica. Una vez limpio, apliquela de manera uniforme sobre la CPU.

ITALIANO

Applicare in modo uniforme sulla CPU il composto termico per il dissipatore di calore fornito in dotazione.

РУССКИЙ

Равномерно нанесите прилагаемую термопасту на процессор.

繁體中文

塗抹導熱膏前，請先清潔CPU表面，取出導熱膏後，並將導熱膏均勻塗抹在CPU上。

簡體中文


塗抹導熱膏前，請先清潔CPU表面，取出導熱膏後，並將導熱膏均勻塗抹在CPU上。

日本語

付属のヒートシンクコンパウンドをCPUにむらなく塗ります。

한국어

제공된 방열판 접착제를 CPU에 고르게 바릅니다.

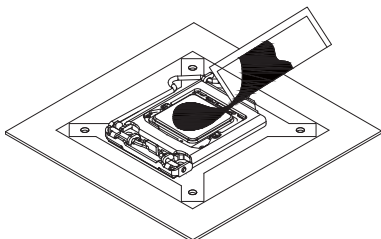

ไทย

ทำความสะอาดพื้นผิวของ CPU ก่อนที่จะใช้จาระบีความร้อนอย่างเท่าเทียมกันบน CPU

3

ENGLISH

Mount LGA2011 and INTEL clips and tighten the nuts.

DEUTSCH

Setzen Sie die LGA2011 und Intel Clips auf die Schrauben und verschrauben Sie diese mit den Schraubmuttern.

FRANÇAIS

Monter les plaque de fixation pour processeur LGA2011 et INTEL, et serrer les écrous.

ESPAÑOL

Monte los clips de LGA2011, INTEL y ajuste las tuercas.

ITALIANO

Installare i dispositivi di fissaggio LGA2011 ed INTEL e stringere i dadi.

РУССКИЙ

Установите интеловские зажимы и закрепите винты.

繁體中文

裝入 INTEL 扣具，將 4 顆螺絲順時針擰緊固定。裝入 LGA2011 螺絲及 INTEL 扣具，將 4 顆螺絲順時針擰緊固定。

簡體中文


裝入 INTEL 扣具，將 4 顆螺絲順時針擰緊固定。裝入 LGA2011 螺絲及 INTEL 扣具，將 4 顆螺絲順時針擰緊固定。

日本語

LGA2011 と INTEL クリップを取り付けて、ナットを締めます。

한국어

LGA2011과 INTEL 클립을 장착하고 너트를 조이십시오.

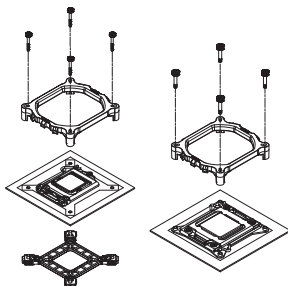

ไทย

ใส่แฉวย spacer ลงในรูตรงกลางบนแผ่นด้านหลังติดตั้งแผ่นหลังแผ่นเข้ากับเมนบอร์ด และสอดสกรูลงยึดคลิป LGA2011 และ INTEL และขันน็อต

4

ENGLISH

Remove the film from the cooler base and place it on the CPU.

DEUTSCH

Folie von der Kühlerbasis entfernen, diese an der CPU anbringen.

FRANÇAIS

Retirez le film de la base de refroidissement et placez-le sur le CPU.

ESPAÑOL

Retire la película de la base de refrigeración y sitúela en la CPU.

ITALIANO

Rimuovere la pellicola dalla base del dispersore di calore e collocarlo sulla CPU.

РУССКИЙ

Снимите пленку с основания радиатора и установите радиатор на процессор.

繁體中文

將散熱器底部保護貼撕離。將散熱器本體放置於CPU上。

簡體中文


將散熱器底部保護貼撕離。將散熱器本體放置於CPU上。

日本語

クーラーベースからフィルムをはがし、CPUに貼ります。

한국어

쿨러 받침대에서 필름을 제거하고 받침대를 CPU에 올려 놓습니다.

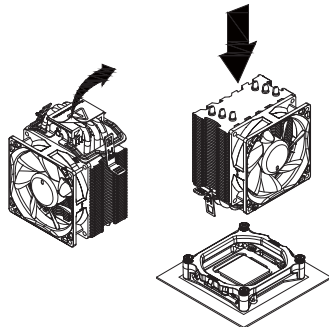

ไทย

ถอดฟิล์มออกจากฐานและวางลงบน CPU

5

ENGLISH

Press the handle to secure cooler Hook the clip onto motherboard's cooler retention bracket

DEUTSCH

Griff zur Sicherung des Kühlers drücken Klemme an Kühlerhalterung des Motherboards einhaken

FRANÇAIS

Appuyez sur la poignée pour fixer le refroidisseur Accrochez l'attache sur le support de retenue du refroidisseur de la carte mère

ESPAÑOL

Presione la manecilla para asegurar el disipador Enganche el clip al Bracket de retención para disipadores de la placa base

ITALIANO

Premere la maniglia per fissare il dispersore di calore Agganciare il fermaglio alla staffa di ritenzione del dispersore di calore della scheda madre

РУССКИЙ

Нажмите на ручку, чтобы закрепить кулер Закрепите зажим на кронштейне крепления кулера материнской платы

繁體中文

按壓板手以鎖固散熱器 將扣具前後勾住主機板上的處理器散熱座

簡體中文


按壓板手以鎖固散熱器 將扣具前後勾住主板上的處理器散熱座

日本語

レバーを押してクーラーを固定します クリップをクーラーリテンションブラケットに掛けます

한국어

핸들을 눌러 쿨러를 고정합니다. 클립을 메인보드의 쿨러 고정 브래킷에 끼웁니다

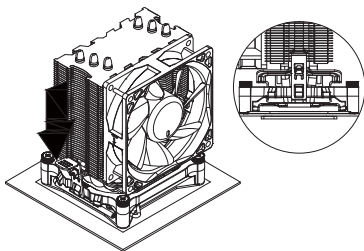

ไทย

กดขาล็อคเพื่อยึดตัว쿨เลอร์
เกี่ยวขาล็อคเข้ากับขายึดฮาร์ดดิสก์กับเมนบอร์ด

AMD Installation Guide

1

ENGLISH

Please clean the surface of CPU then apply thermal grease evenly on CPU.

DEUTSCH

Reinigen Sie bitte die Oberfläche der CPU bevor Sie die Wärmeleitpaste gleichmäßig auftragen.

FRANÇAIS

Appliquez la graisse thermique fournie uniformément sur la surface du CPU

ESPAÑOL

Por favor, limpie la superficie del microprocesador antes de aplicar la pasta termica. Una vez limpio, apliquela de manera uniforme sobre la CPU.

ITALIANO

Applicare in modo uniforme sulla CPU il composto termico per il dissipatore di calore fornito in dotazione.

РУССКИЙ

Равномерно нанесите прилагаемую термопасту на процессор.

繁體中文

塗抹導熱膏前，請先清潔CPU表面，取出導熱膏後，並將導熱膏均勻塗抹在CPU上。

簡體中文


塗抹導熱膏前，請先清潔CPU表面，取出導熱膏後，並將導熱膏均勻塗抹在CPU上。

日本語

付属のヒートシンクコンパウンドをCPUにむらなく塗ります。

한국어

제공된 방열판 접착제를 CPU에 고르게 바릅니다.

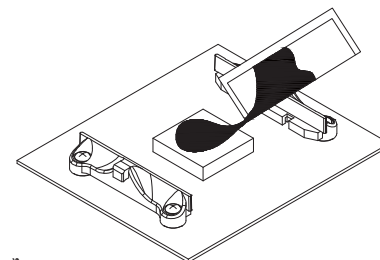

ไทย

ทำความสะอาดพื้นผิวของ CPU ก่อนที่จะใช้จาระบีความร้อนอย่างเท่าเทียมกันบน CPU

2

ENGLISH

Remove the film from the cooler base and place it on the CPU.

DEUTSCH

Folie von der Kühlerbasis entfernen, diese an der CPU anbringen.

FRANÇAIS

Retirez le film de la base de refroidissement et placez-le sur le CPU.

ESPAÑOL

Retire la película de la base de refrigeración y sitúela en la CPU.

ITALIANO

Rimuovere la pellicola dalla base del dispersore di calore e collocarlo sulla CPU.

РУССКИЙ

Снимите пленку с основания радиатора и установите радиатор на процессор.

繁體中文

將散熱器底部保護貼撕離。將散熱器本體放置於CPU上。

簡體中文


將散熱器底部保護貼撕離。將散熱器本體放置於CPU上。

日本語

クーラーベースからフィルムをはがし、CPUに貼ります。

한국어

쿨러 받침대에서 필름을 제거하고 받침대를 CPU에 올려 놓습니다.

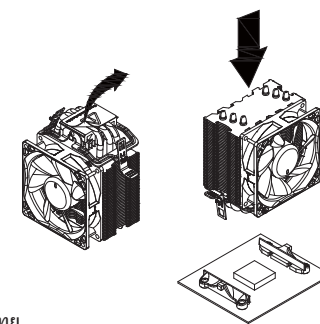

ไทย

ถอดฟิล์มออกจากฐานและวางลงบน CPU

3

ENGLISH

Press the handle to secure cooler Hook the clip onto motherboard's cooler retention bracket

DEUTSCH

Griff zur Sicherung des Kühlers drücken Klemme an Kühlerhalterung des Motherboards einhaken

FRANÇAIS

Appuyez sur la poignée pour fixer le refroidisseur Accrochez l'attache sur le support de retenue du refroidisseur de la carte mère

ESPAÑOL

Presione la manecilla para asegurar el disipador Enganche el clip al Bracket de retención para disipadores de la placa base

ITALIANO

Premere la maniglia per fissare il dispersore di calore Agganciare il fermaglio alla staffa di ritenzione del dispersore di calore della scheda madre

РУССКИЙ

Нажмите на ручку, чтобы закрепить кулер Закрепите зажим на кронштейне крепления кулера материнской платы

繁體中文

按壓板手以鎖固散熱器 將扣具前後勾住主機板上的處理器散熱座

簡體中文


按壓板手以鎖固散熱器 將扣具前後勾住主板上的處理器散熱座

日本語

レバーを押してクーラーを固定します クリップをクーラーリテンションブラケットに掛けます

한국어

핸들을 눌러 쿨러를 고정합니다. 클립을 메인보드의 쿨러 고정 브래킷에 끼웁니다

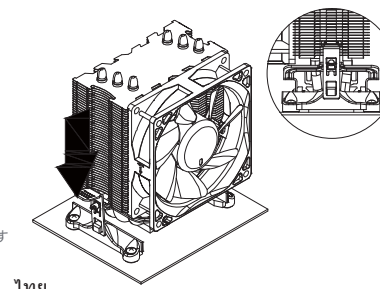

ไทย

กดขาล็อคเพื่อยึดตัว쿨เลอร์
เกี่ยวขาล็อคเข้ากับขายึดฮาร์ดดิสก์กับเมนบอร์ด

Please refer to SilverStone website for latest specifications updates.