



Electrolux

Instruction Book

使用説明手冊

사용 설명서

Sách Hướng Dẫn


Buku Petunjuk

คู่มือการใช้งาน







کتاب التعليمات


800 WET&DRY CORDLESS CLEANER




EW82U1DB












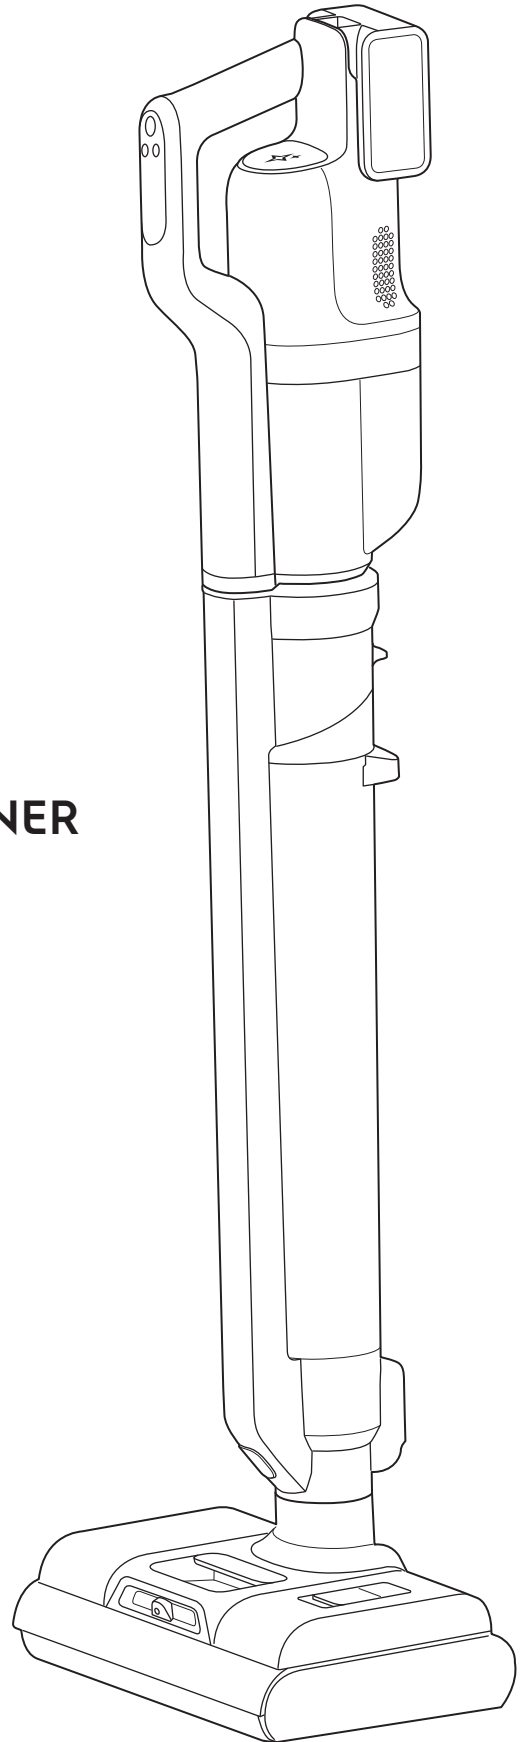


*Actual product may differ from illustration.

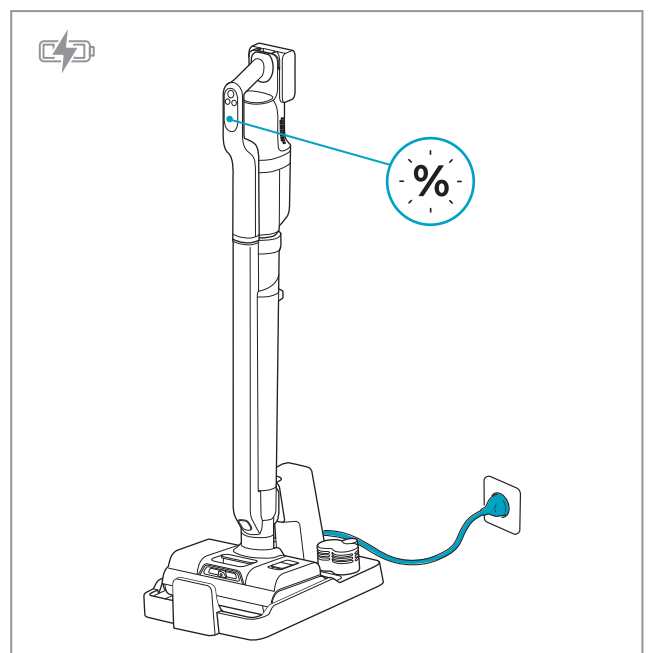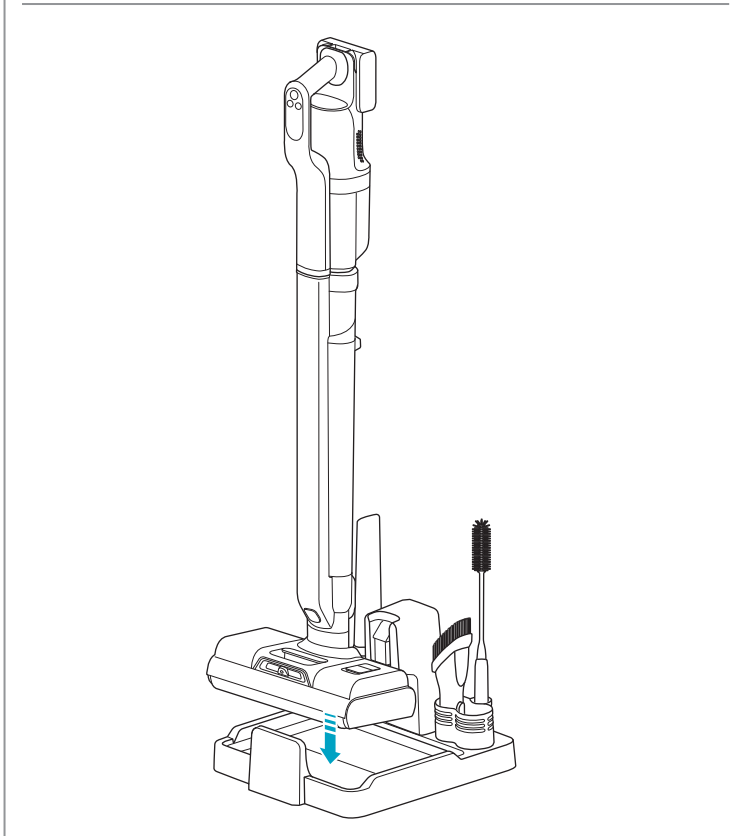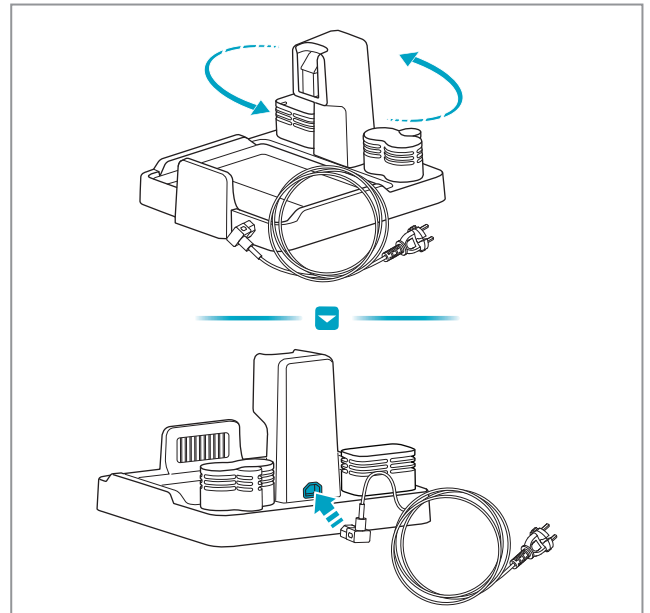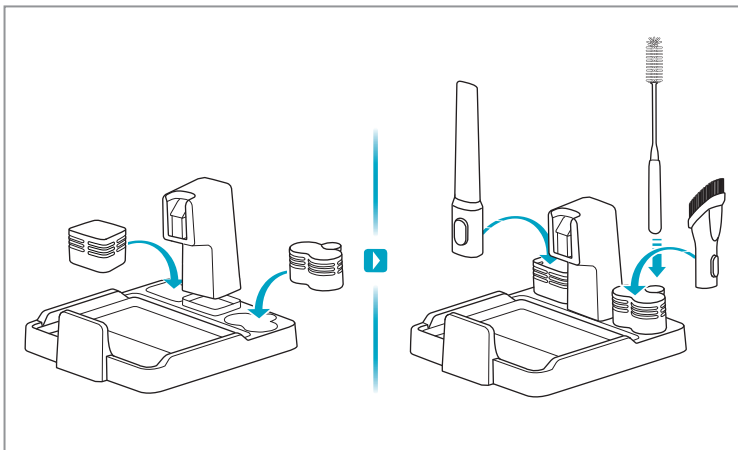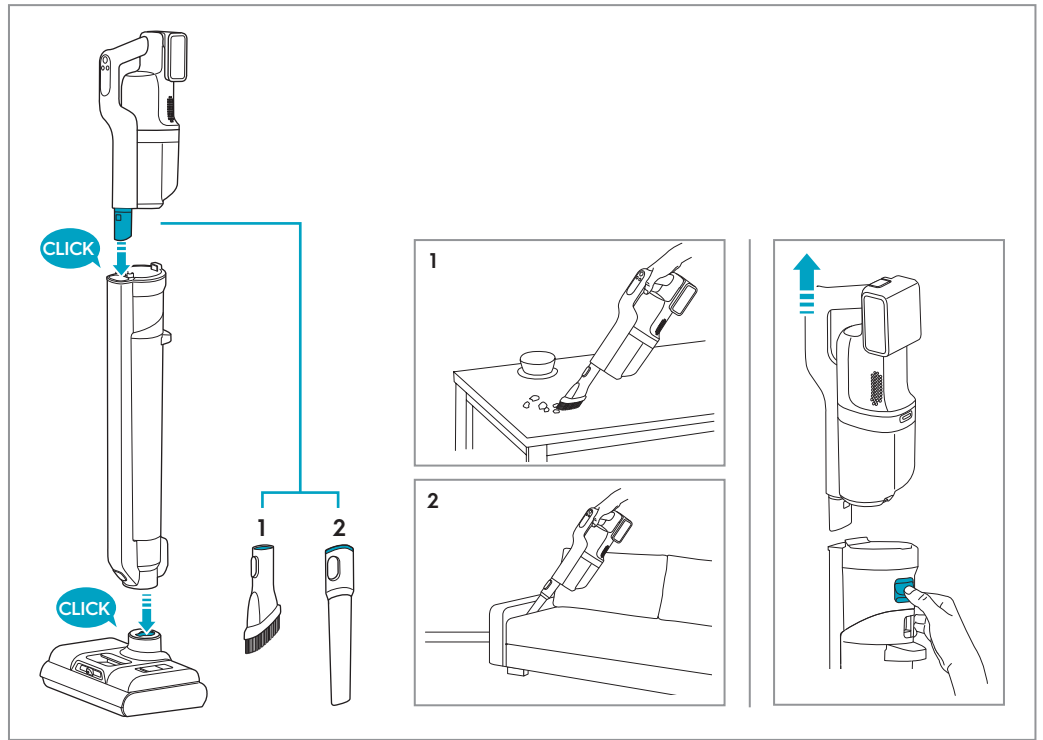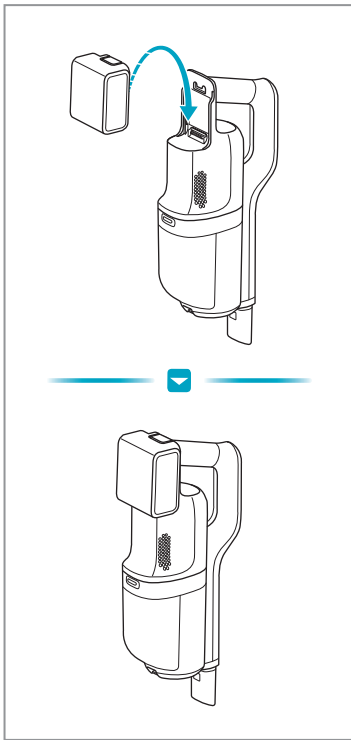

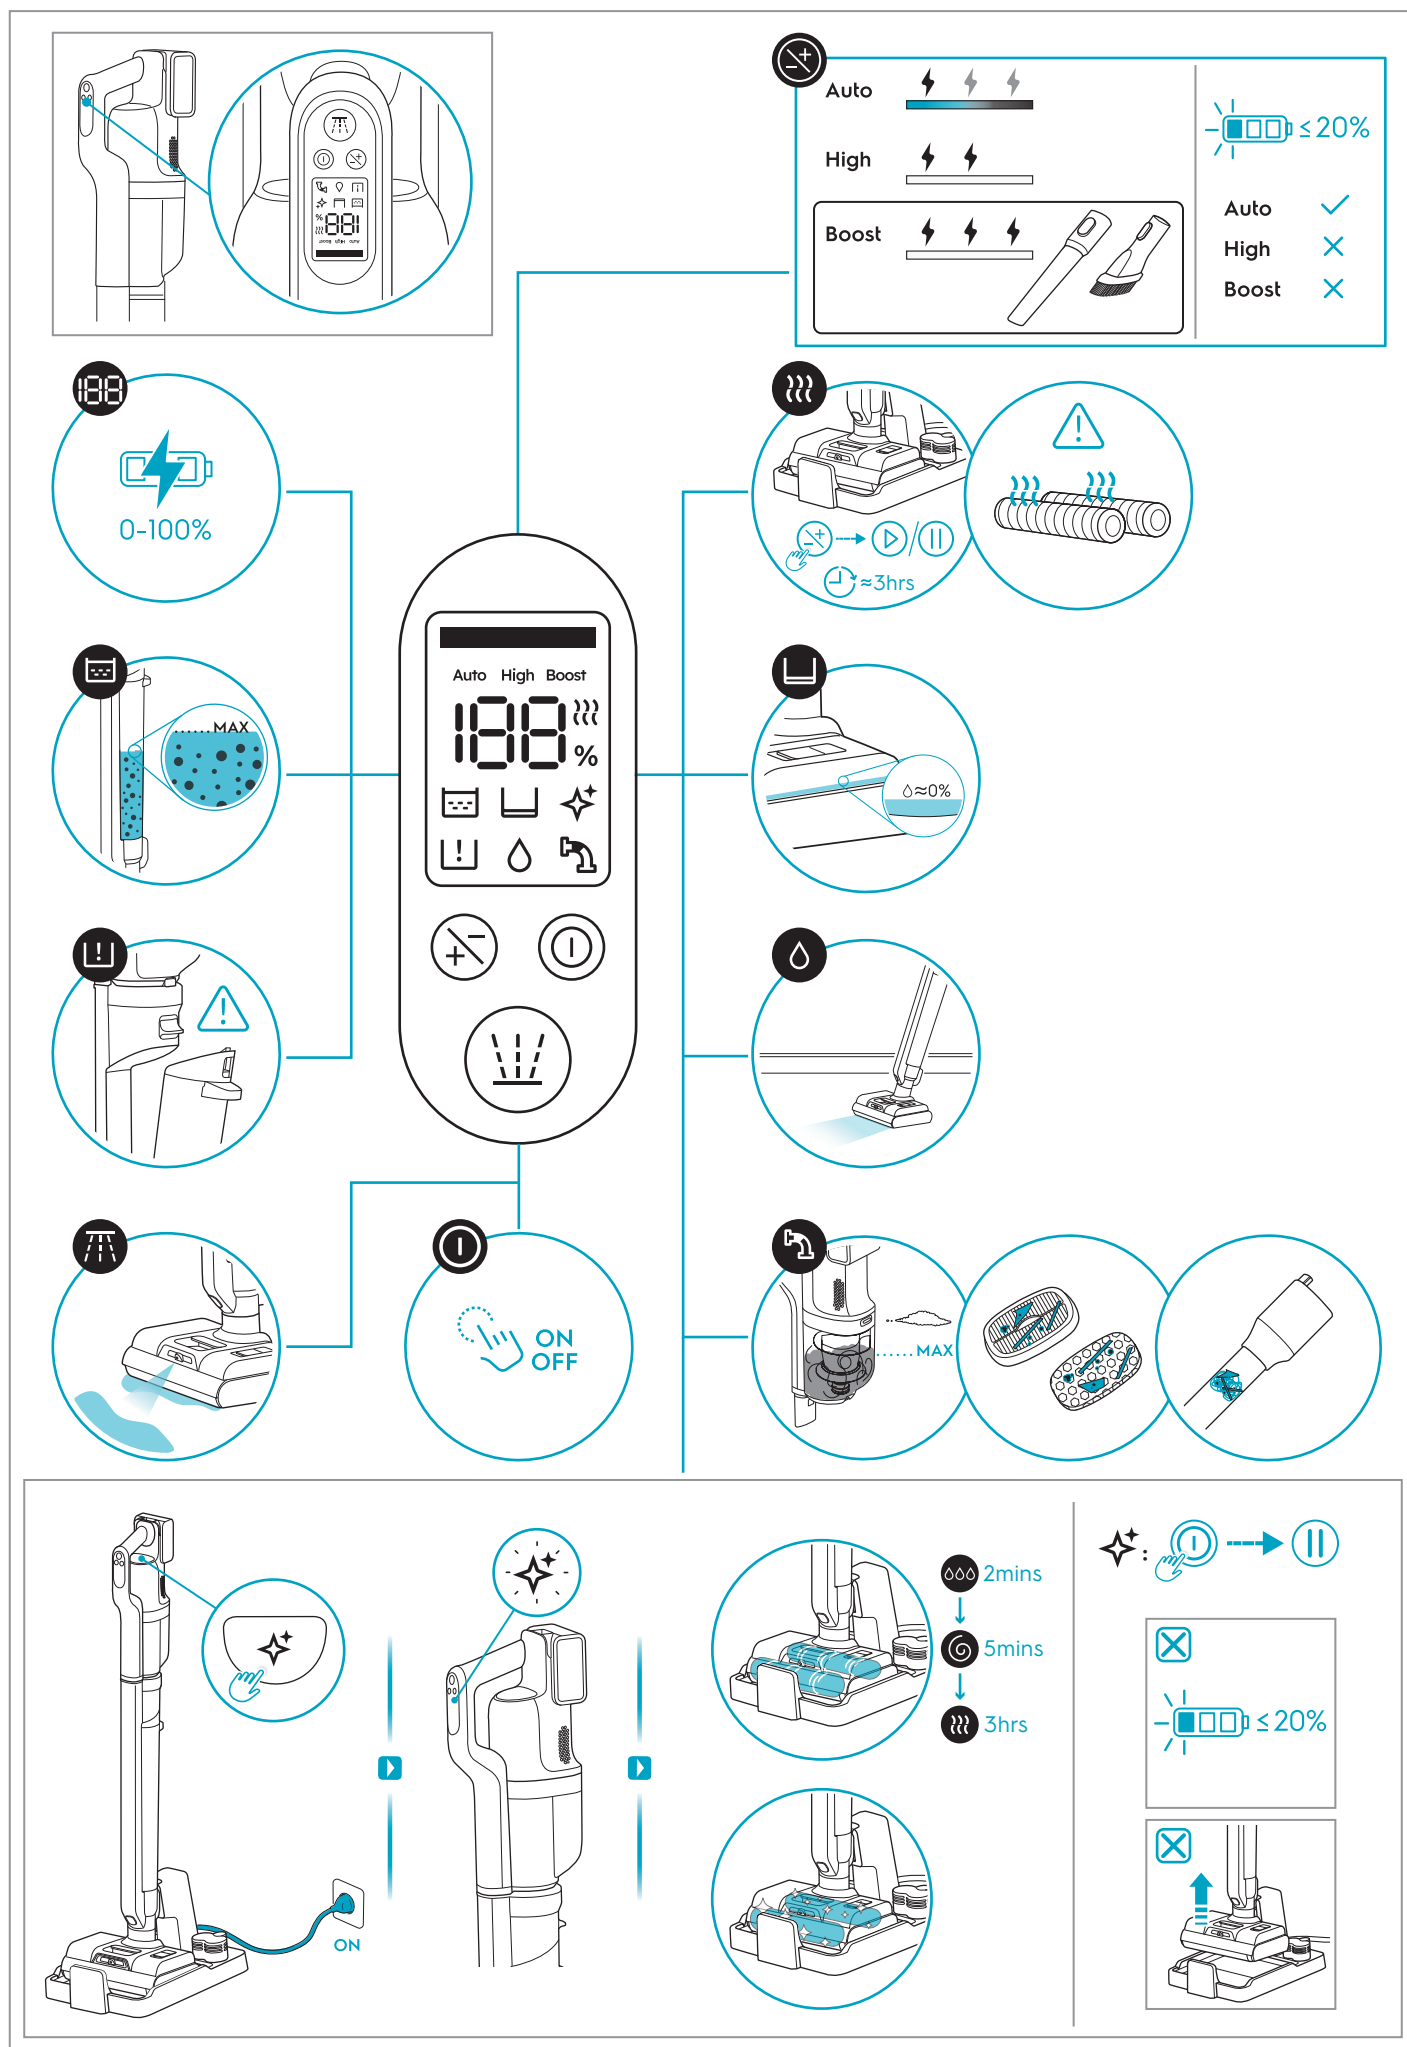


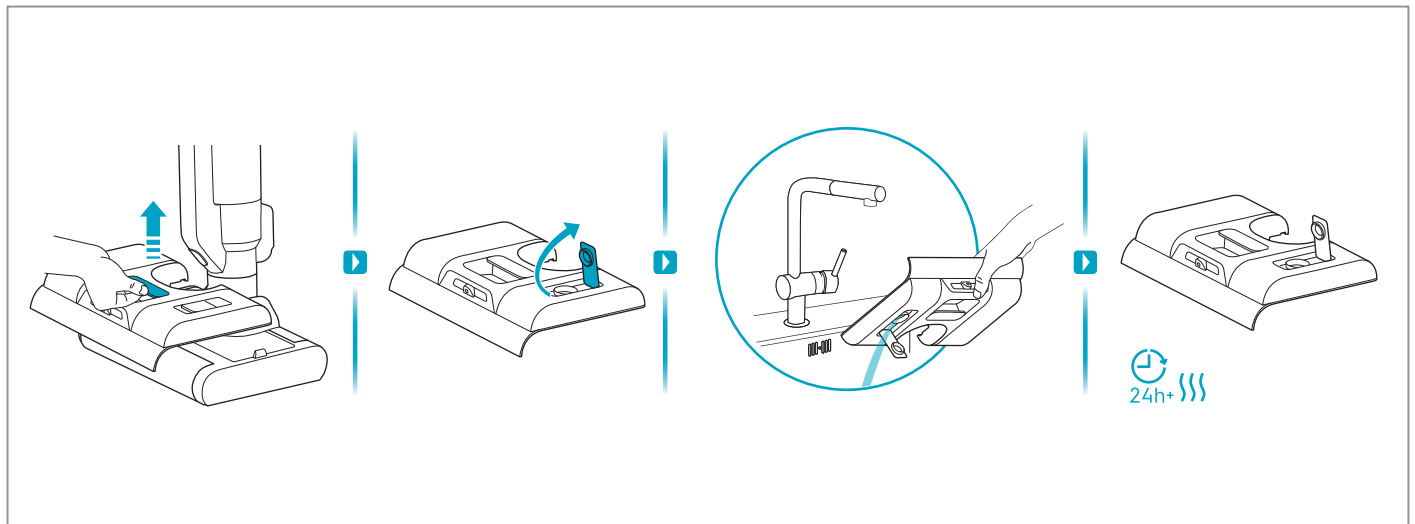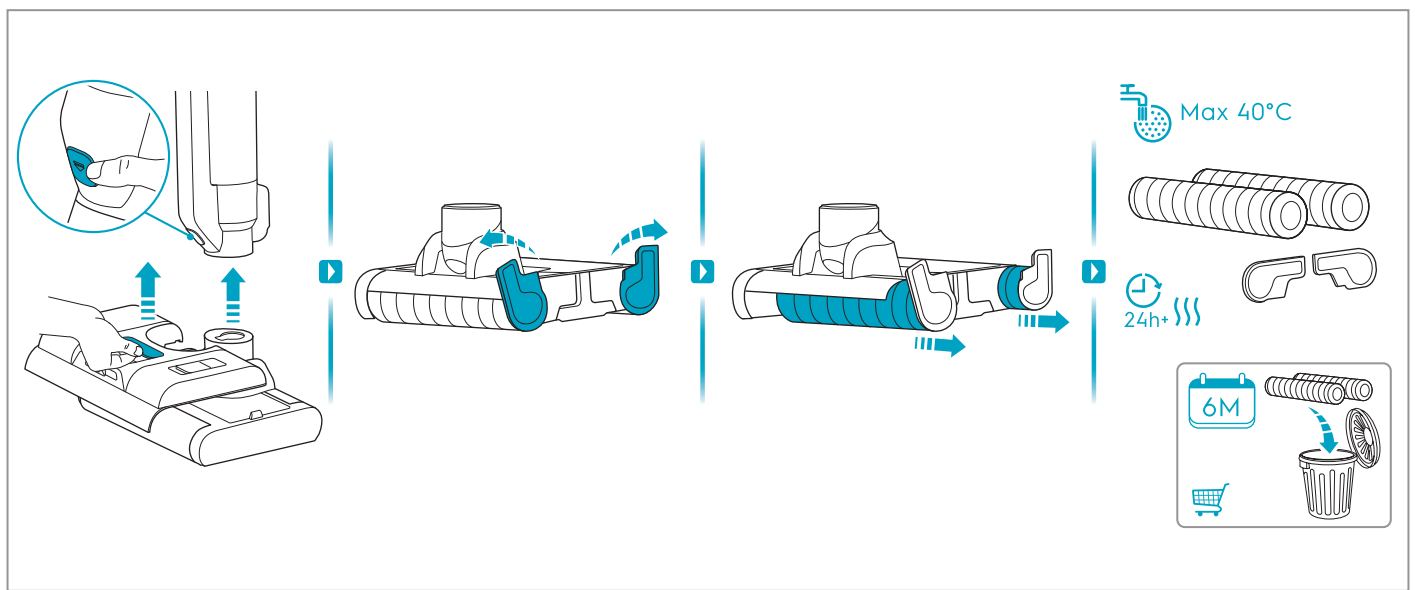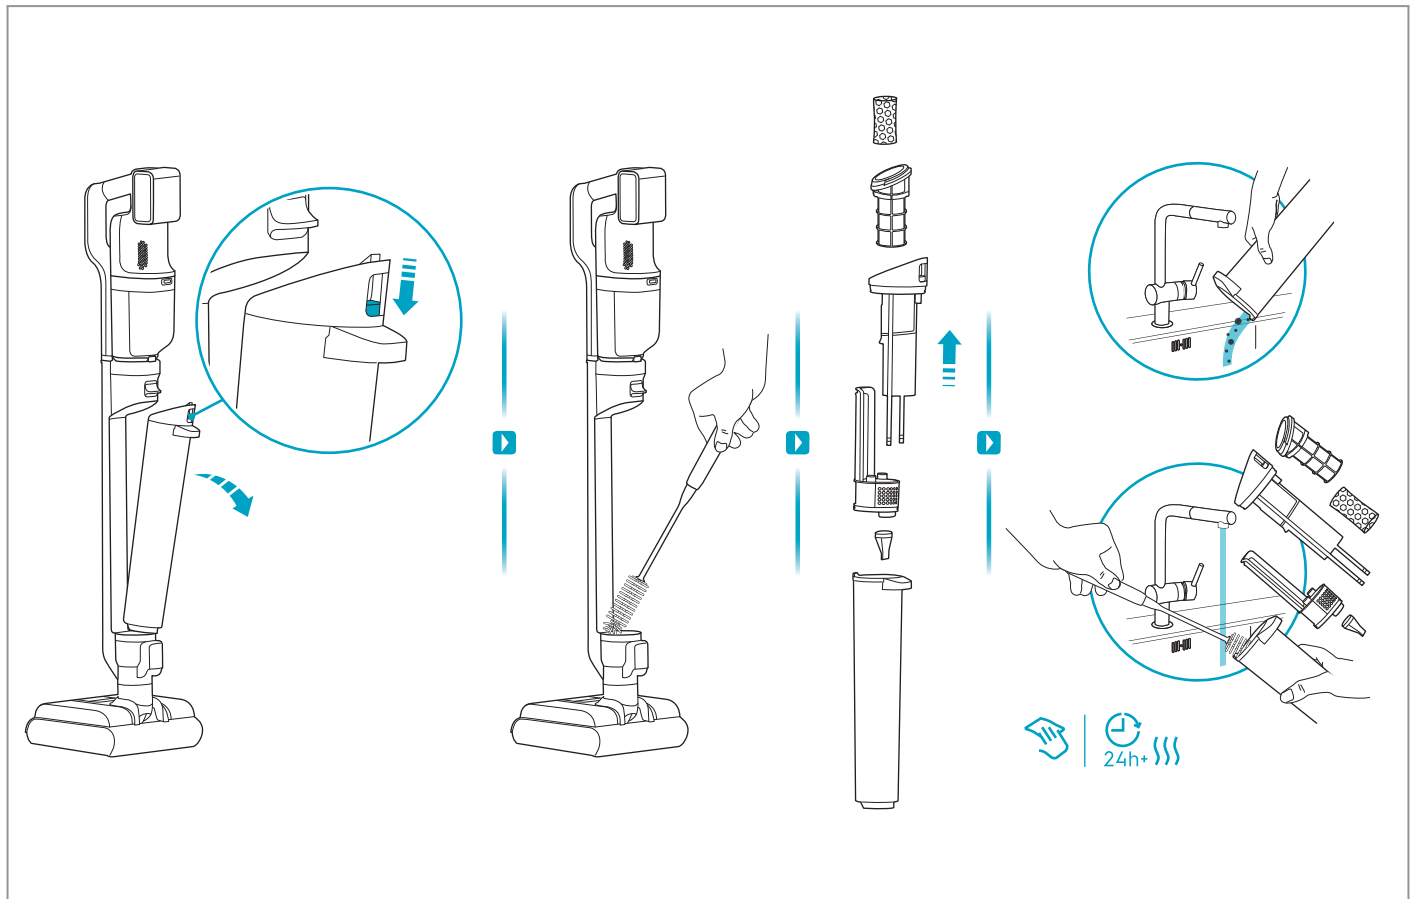

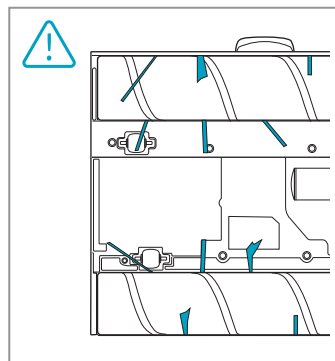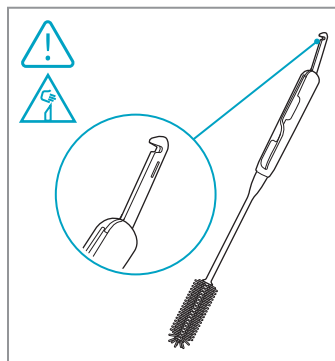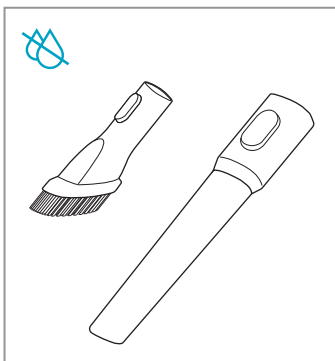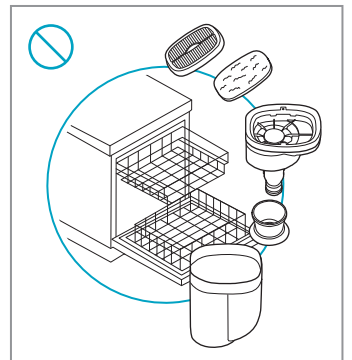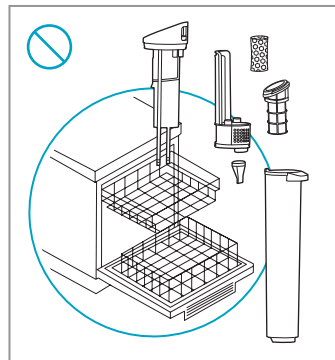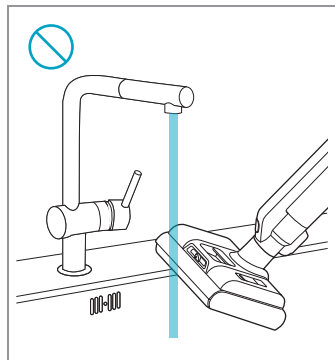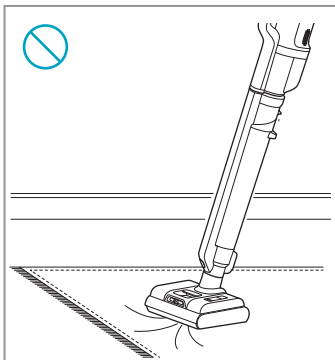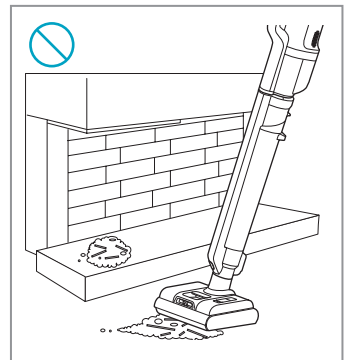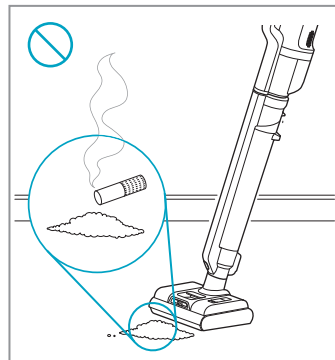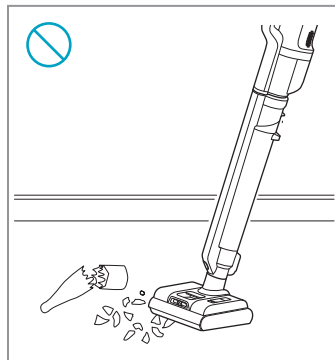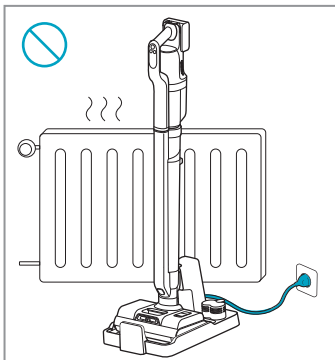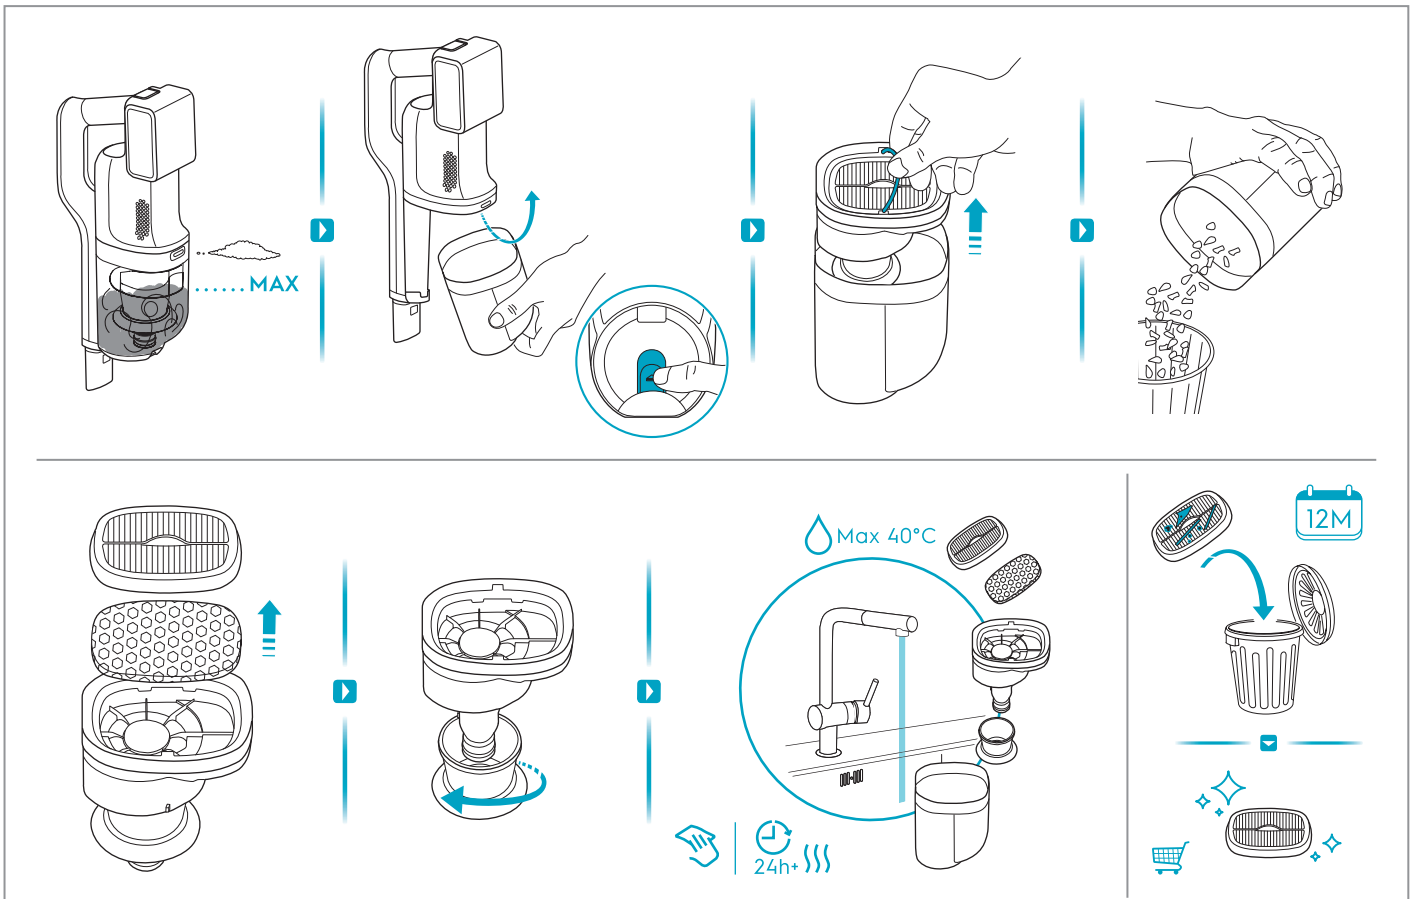




www.shop.electrolux.com

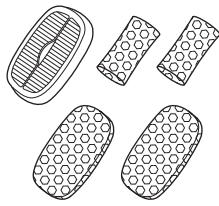

Filter Kit

EF163

 900 923 808



Brush Roll

ZE191


900 923 809



Detergent

EHFLC3 / FLD1

900 923 819 / 900 923 782

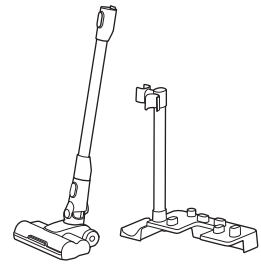

Multi-floor Nozzle Kit

KIT24

900 923 817

*Accessories may vary by market.



A28801001