

SENCOR®

STS 0600BK



TOASTER

Translation of the original manual




SENCOR®

STS 0600BK



A

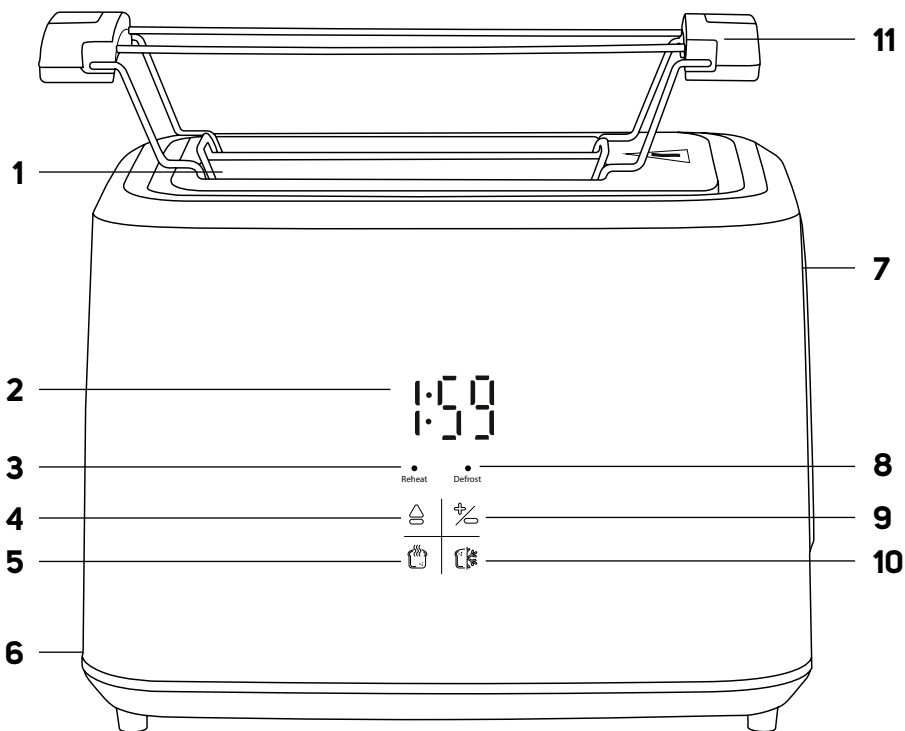

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children unless they are older than 8 years of age and under supervision.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.



Caution: Hot surface

The temperature of accessible surfaces may be higher if the appliance is in operation. Such surfaces can become hot during use. Do not touch hot surface. This could cause skin burns.

- The bread may catch on fire, so do not use the appliance near or under flammable material such as curtains.

- Clean surfaces that come into contact with food according to the instructions in the chapter "Cleaning and Maintenance". The removable tray must be cleaned regularly to prevent the accumulation of crumbs. When cleaning, follow the instructions in the chapter "Cleaning and maintenance".
- This appliance is not intended for operation through an external timer switch or a remote control.

Additional Important Safety Instructions for Use of the Appliance

- This product is designed for household use only. It is also suitable for personal non-commercial use in spaces such as:
 - staff kitchenettes in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments.
 - The appliance is used for toasting baked goods such as toasted bread, ordinary consumer bread, buns, bagels, etc.
 - Do not use the appliance in an industrial environment or outdoors or for purposes other than those for which it is intended.
 - Do not use the appliance to bake sweet pastries that are sprinkled with sugar or contain compote, jam or marmalade, such as cakes, buns, etc. Otherwise a fire may result.
 - Before connecting this appliance to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in power socket. Connect the appliance only to a grounded power socket.
 - Fully unwind the power cord before using the appliance. Make sure the power cable does not hang over the edge of a table or that it is not touching a hot surface.
 - Do not place the appliance on or near an electric or gas hob, table edge, sink draining board or unstable surfaces. The appliance must be located on a stable and even surface.
 - In terms of fire safety, this appliance complies with the standards in force in the European Union. Within the meaning of these standards, these are appliances that can be operated on a table or similar surface, provided that a safe distance of at least 50 cm is maintained from combustible material surfaces in the direction of main radiation and at least 10 cm in other directions.
 - Do not use the appliance without the crumb tray properly inserted.
 - Before using the appliance for the first time, it must be idled at least three times at the maximum toasting setting to get rid of any odour.
 - The temperature of the accessible surfaces of the appliance may be higher during and after operation due to residual heat. Be careful not to touch the heated surface.
 - Do not leave the appliance unattended when in use.
 - Never cover the appliance when it is in operation or warm.
 - Do not insert excessively large pieces of bread, bread wrapped in aluminium foil or metal objects into the toasting slots. Otherwise, fire or electric shock may result.
 - Special care must be taken when removing smaller pieces of bread from the appliance to prevent burns.
 - Never bake bread by placing it horizontally directly on the toasting slots. This would disrupt the air circulation and could cause a fire.
 - Never attempt to remove blocked toast, bagel or other baked goods with a knife or other metal object; damage to the heating elements, serious malfunction of the appliance, or electric shock could result. Let the appliance cool down, pull the power cord out of the socket and carefully remove the blocked piece of bread.
 - Do not remove the bread while the appliance is in operation.
 - Use only the accessories supplied with the appliance.
 - To prevent potential injury by electric shock, do not submerge this appliance or its power cord under water or any other liquid.
 - Always switch off the appliance and unplug it from the mains socket when leaving it unattended or when not in use, before cleaning and moving it. Allow the appliance to cool completely before moving, cleaning and storing.
 - Unplug the appliance from the power socket by pulling the plug, not the power cord. Otherwise, damage to the power cord or the socket could occur.
 - Do not use the appliance if it is damaged, if it is not working properly, if it has been dropped on the ground or immersed in water. To prevent dangerous situations, do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.
-

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.




.....

EN Toaster

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have found all its components. It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE APPLIANCE

- | | |
|---|---|
| A1 Toasting slots | A6 Detachable crumb tray |
| A2 Display | A7 Control lever |
| A3 Reheat indicator light | A8 Defrost indicator light |
| A4  button to stop the toasting process immediately | A9  button to adjust the degree of toasting |
| A5  button for bread heating | A10  button for baking frozen pastries |
| | A11 Removable attachment for toasting buns |

PURPOSE OF USE

- The Sencor STS 0600BK toaster is used for toasting baked goods such as toasted bread, ordinary consumer bread, buns, bagels, etc.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags.
- Before first use, the toaster must be run at least three times at the maximum toasting setting to get rid of any odour. During this process, you may notice a slight smoke or smell. This is a normal phenomenon that will disappear over time.


OPERATING THE APPLIANCE

1. Place the toaster on a flat, dry and stable surface well away from combustible material surfaces as specified in the Safety Instructions section.
2. Unwind the power cord completely. Insert the cord into the groove located at the toaster bottom. This will ensure the safe routing of the power cord. Then connect the toaster to the power socket.
3. Make sure the crumb tray is inserted correctly.
4. Insert a slice of toast bread, a smaller slice of regular bread, half a bun or bagel, etc. into each slot. The slices of bread must not be too thick to avoid getting stuck in the slots and should not protrude from the toaster when the control lever is in the down position.



Warning:

Do not put bread covered with butter, margarine, etc. in the toaster.

5. Push down the control lever. It automatically locks in the lower position.
6. Use the  button to set the toasting level from 1 to 7, where setting 1 is the lightest browning toasting and 7 is the darkest toasting


intensity. For the first use, we recommend setting the toasting intensity to level 3. You can adjust the degree of toasting according to your own preferences. The initial level of toasting is 4.

7. The display will show the set toasting level and after a while the display will start counting down the toasting time. It cannot be changed. It is preset for each stage and function of the toaster.



Note:

If the toaster is not connected to a power socket, the lever will not be locked in the down position and thus will not be started.

8. During the toasting process, you can check the state of toasting by lifting the control lever upwards. If necessary, you can cancel the toasting process by pressing .
9. As soon as the set time has elapsed, a sound alert will sound, the toaster will automatically turn off and eject the inserted bread. Remove the bread from the toaster and repeat the above procedure to toast the other breads. However, it is recommended to reduce the toasting level as the toaster is already heated.



Note:

To remove smaller pieces of bread, lift the control lever all the way up.




Warning:

Never attempt to take out a jammed piece of bread or any other bread product using a knife or another metal object. This could lead to injury by electrical shock or damage the appliance. If the bread is blocked inside the toaster, turn it off, disconnect it from the power socket and let it cool down. Then carefully remove the bread.

- After use, unplug the toaster from the power outlet and let it cool down.


Bread Heating Function

This function allows you to heat the bread without further toasting.

1. Insert the pastry to be warmed up in the openings.
2. Push down the control lever. It automatically locks in the lower position.
3. Press the button  and the Reheat indicator light will turn on.
4. The display starts counting down the preset heating time.
5. As soon as the set time has elapsed, a sound alert will sound, the toaster will automatically turn off and eject the inserted bread. Remove the bread from the toaster and repeat the above procedure to heat the other breads.


 


Note:

The heating time is preset from the factory and cannot be adjusted. If you need to cancel the heating process, press the  button.

Frozen Bread Toasting Function


Frozen Bread Toasting function is used to defrost the bread and toast to the set level.

1. Insert the frozen bread into the openings.
2. Push down the control lever. It automatically locks in the lower position.
3. Press the  button and the Defrost indicator light will turn on.
4. Use the  button to set the toasting level from 1 to 7, where setting 1 is the lightest browning toasting and 7 is the darkest toasting intensity. For the first use, we recommend setting the toasting intensity to level 3. You can adjust the degree of toasting according to your own preferences. The initial level of toasting is 4.
5. The display will show the set toasting level and after a while the display will start counting down the toasting time.

6. As soon as the set time has elapsed, a sound alert will sound, the toaster will automatically turn off and eject the inserted bread. Remove the bread from the toaster and repeat the above procedure to toast the other breads.



Note:


If you need to cancel the toasting process of the frozen bread, press .



Warning:

The toasting function for frozen bread and the heating function for bread cannot be selected at the same time.

Attachment for toasting buns

- Place the attachment on the toaster and place the bread (small baguette, roll or bun) you want to toast on it. Adjust the low toasting intensity from 1 to 3 and press the control lever down until it locks in the lower position. The toasting process starts automatically.
- Wait for the toasting process to end automatically, or press the  button to stop the operation immediately if the bread is already baked sufficiently. If the bread is not baked sufficiently even after the end of operation, repeat the toasting process.
- When removing the bread from the attachment, be very careful not to touch the hot parts.

Tips and Tricks to Set the Toasting Intensity

- Toasting is a two-step process. The first phase evaporates the moisture from the bread and the second phase toasts it.
- The toasting level depends on the type, size and freshness of the bread.
- Fresh bread will be toasted longer, because the moisture contained in it must first evaporate and only then it begins to be toasted. Therefore, it requires setting a higher level of toasting intensity. Wholemeal bread, thicker slices of bread, sliced buns and bagels also require a higher toasting setting.
- Older bread, which does not contain as much moisture as fresh bread, will toast for a shorter time and therefore requires a lower than normal toasting intensity setting.
- Smaller and weaker slices of bread will toast faster than larger and thicker slices of bread.
- If you are toasting only one slice of bread, set a lower toasting level than if you are toasting two slices at the same time.

CLEANING AND MAINTENANCE

- Clean the toaster after each use. Before cleaning, make sure that it is unplugged from the power outlet and that it is cool.
- Slide the crumb tray out of the toaster and remove the crumbs, wipe it with a clean, dry cloth and put it back in place. Clean the crumb tray after each use of the toaster. Make sure that crumbs do not accumulate in it. Otherwise, they could burst into flames.
- To remove crumbs from the inner compartment, turn the toaster upside down and carefully shake out the crumbs above the rubbish bin.
- Wipe the outer surface of the toaster with a dry or slightly damp cloth and then wipe it dry. Make sure that no water or moisture leaks into the inside of the toaster.
- Do not use cleaning products causing abrasion, petrol or solvents for cleaning.
- To prevent potential injury by electric shock, do not submerge this appliance or its power cord under water or any other liquid.

TECHNICAL SPECIFICATIONS

Rated voltage range220–240V~
Rated frequency.....50–60 Hz
Rated power input.....920–1080 W

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

Changes to text and technical parameters are reserved.