

# SENCOR®

SWF 2010BK

EN

WAFFLE MAKER  
Translation of the original manual




**SENCOR**<sup>®</sup>

**SWF 2010BK**



**A**

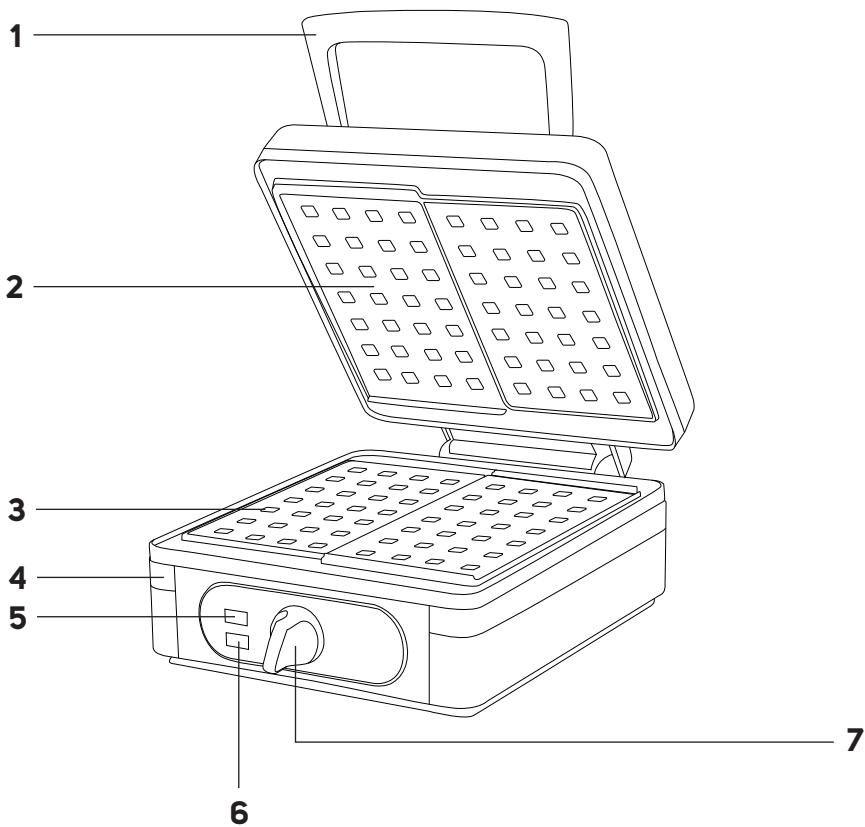

## Important Safety Instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- This appliance is not designed to be controlled using an external timer switch or a remote control.
- Wipe the waffle plates with a soft sponge slightly dampened in warm water.



## **WARNING:**

Hot surface.

- The temperature of accessible surfaces may be higher if the appliance is in operation. Take care not to touch the hot plate or the upper cover. The appliance may remain hot even after being switched off. Before cleaning, maintenance or other manipulation, make sure that the appliance is completely cooled down.
- Before connecting the appliance to the mains socket, make sure that the nominal voltage indicated on the label of the appliance matches the voltage of the socket to which you want to connect the appliance.
- Connect the appliance only to a properly grounded socket.
- This product is designed for household use only. It is not intended for use in areas such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - agricultural farms;
  - bed and breakfast establishments.
- Do not use the appliance in an industrial environment or outdoors or for purposes other than those for which it is intended.
- Do not place the appliance on windowsills, sink drain trays or unstable surfaces. Always place the appliance on a stable, flat and dry surface.
- Do not place the appliance on or near an electric or gas stove, do not place it in the vicinity of naked fire or appliances that are sources of heat.
- To prevent a risk of electric shock, do not submerge any part of the appliance in water or any other liquid.
- This appliance may only be used with the original waffle maker plates supplied with it.
- During operation, sufficient space for air circulation above and on all sides of the appliance should be provided. Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- This appliance is intended for the preparation of waffles only. The appliance is not used to prepare other foods, e.g. for flambéing.
- After each use, clean the surface of the plates as described in the Maintenance and Cleaning chapter.
- Always switch the appliance off and unplug it from the mains socket when left unattended, after use and before cleaning or moving. Allow the appliance to fully cool down before moving, cleaning or storing.
- Make sure there is no batter left on the waffle plates before moving.
- When disconnecting the power cord from the socket, always pull the plug, not the cord. Otherwise, damage to the power cord or the socket could occur.
- Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

# EN Waffle maker User's Manual

- Thank you for purchasing our SENCOR product; we hope you will be satisfied with it.
- Before using this appliance, please familiarise yourself with the user's manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference.
- We recommend to keep the original packaging, packaging materials, receipt, and proof of the seller's liability or warranty certificate for a minimum of the duration of statutory right of faulty performance or warranty of quality. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

## DESCRIPTION OF THE APPLIANCE

- |           |                                 |           |                                     |
|-----------|---------------------------------|-----------|-------------------------------------|
| <b>A1</b> | Handle                          | <b>A5</b> | Power indicator light               |
| <b>A2</b> | Top plate for making waffles    | <b>A6</b> | Temperature control indicator light |
| <b>A3</b> | Bottom plate for making waffles | <b>A7</b> | Temperature control                 |
| <b>A4</b> | Waffle maker base               |           |                                     |

## BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Grasp the waffle maker by the handle and lift off the top plate. Wipe the waffle plates with a soft sponge slightly dampened with warm water. Then wipe dry with a clean cloth. Make sure both plates are clean and dry.
- Before use, it is recommended to rub both plates with a small amount of vegetable oil. Spread evenly. Remove excess oil using a paper kitchen towel.
- We recommend turning on the waffle maker at maximum temperature for 3 to 5 minutes to burn the plates and remove any dirt and odour. During this process, you may notice a slight smoke or a slight smell. This is a normal event which disappears during use.

## OPERATING THE APPLIANCE

1. Insert the mains cord plug into a power socket. The power light will come on and stay on as long as the waffle maker is running.
2. Turn the temperature control to "MAX" and leave the top plate covered. The waffle maker will start preheating, which takes about 10 minutes. Temperature control indicator light will be on.
3. When the temperature control light goes off, the waffle maker is preheated.
4. Set the temperature control to the desired toasting level. Moving the temperature control to the right to "MAX" sets a darker degree of browning, while moving the dial to the left to "LOW" sets a lighter degree of browning. If you are using the waffle maker for the first time, we recommend that you set the temperature control to approximately halfway to "MIDDLE" and then adjust as needed.
5. While the waffle maker is heating up, prepare the waffle batter.
6. Grasp the waffle maker by the handle and lift off the top plate. Carefully pour the waffle batter onto the bottom plate. Make sure it is evenly spread, or spread it with a suitable heat-resistant squeegee.
7. Carefully lower the top plate. Avoid excessive force to prevent the batter from escaping from the plates.
8. Let the waffles toast for 5 to 7 minutes as needed. Check the state of browning regularly.
9. Once the waffles are toasted, flip off the top plate using the handle and carefully remove the waffles using a wooden spoon or suitable heat-resistant plastic utensil. Never use metal or sharp objects. You could scratch the non-stick surface of the waffle maker plates.

10. Repeat the process with the remaining batter.

### Warning:

Do not use metal utensils, kitchen knives, forks or other similar items. This could scratch the non-stick coating of the plate.



### Note:

If the waffles are getting burned to the plates, we recommend brushing them with a small amount of vegetable oil.

11. Once you are not using the waffle maker, turn the temperature control to "STOP", unplug the power cord from the wall outlet and allow the waffle maker to cool before cleaning it.

## CLEANING AND MAINTENANCE

- Before cleaning, unplug the power cord from the mains socket and allow the appliance to cool down.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. Do not use wire cloths or sponges with wires, etc. to clean the surface of the waffle plates. No part of this appliance is dishwasher safe.

### Warning:

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.



- Grasp the waffle maker by the handle and lift off the top plate. Wipe the waffle plates with a soft sponge slightly dampened with warm water. Then wipe dry with a clean cloth. Make sure both plates are clean and dry.
- Wipe the appliance outer surface with a soft sponge slightly moistened in warm water. Then wipe dry with a clean cloth.
- After cleaning, we recommend rubbing a small amount of vegetable oil on both plates. Spread evenly. Remove excess oil using a paper kitchen towel.

## Storage

- If the appliance will not be used for an extended period, unplug it from the power socket, let it cool down, and clean it following the instructions provided above.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

## TECHNICAL SPECIFICATIONS

Rated voltage range	220–240V~
Rated frequency	50/60Hz
Rated power input	1400W

We reserve the right to change the text and technical specifications.

## INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

### Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the EU directives that apply to it.

FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.eu](http://www.sencor.eu)