


PHILIPS
Wireless Home Speaker
TAW6205

Quick Start Guide

Register your product and get support at:
www.philips.com/support


-2-

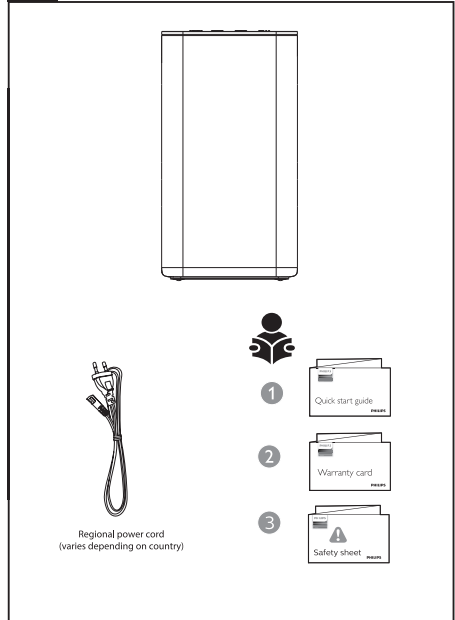

1 Quick start guide
2 Warranty card
3 Safety sheet

Regional power cord (varies depending on country)

-3-

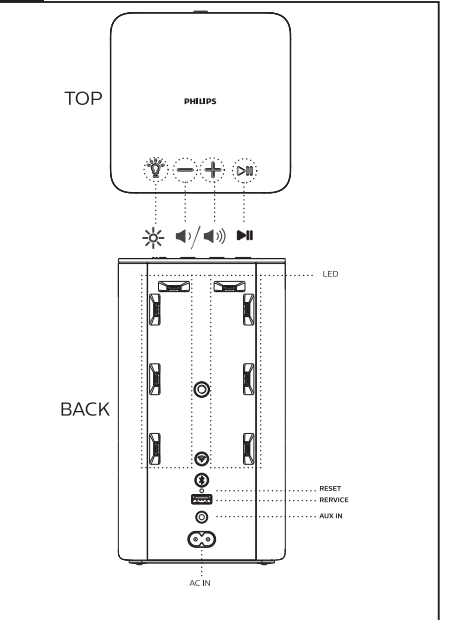

TOP


BACK

AC IN

RESET SERVICE AUX IN


40 SEC.

-4-

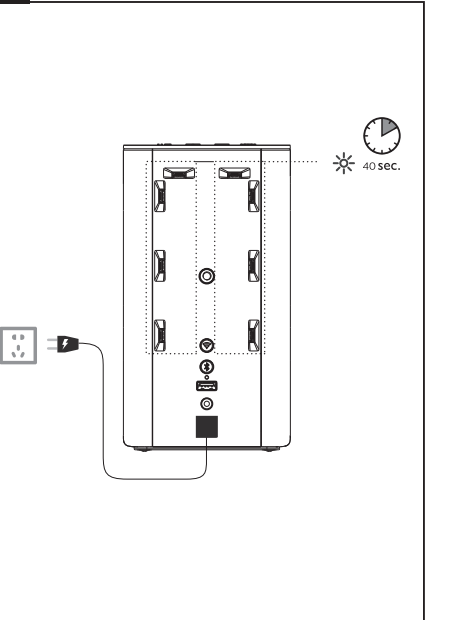

www.philips.com/support

-5-

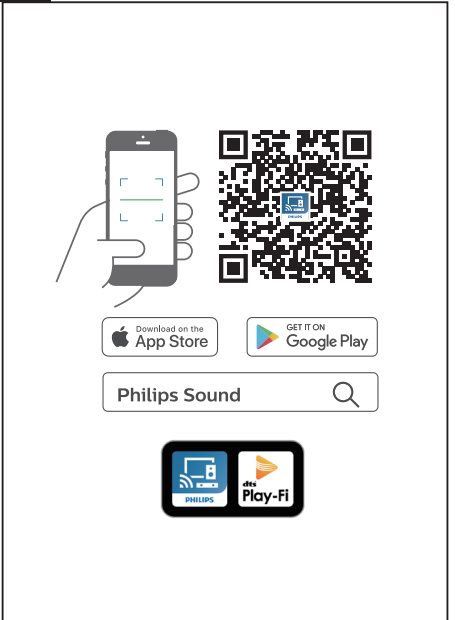


Download on the App Store
GET IT ON Google Play

Philips Sound

Play-Fi

-6-

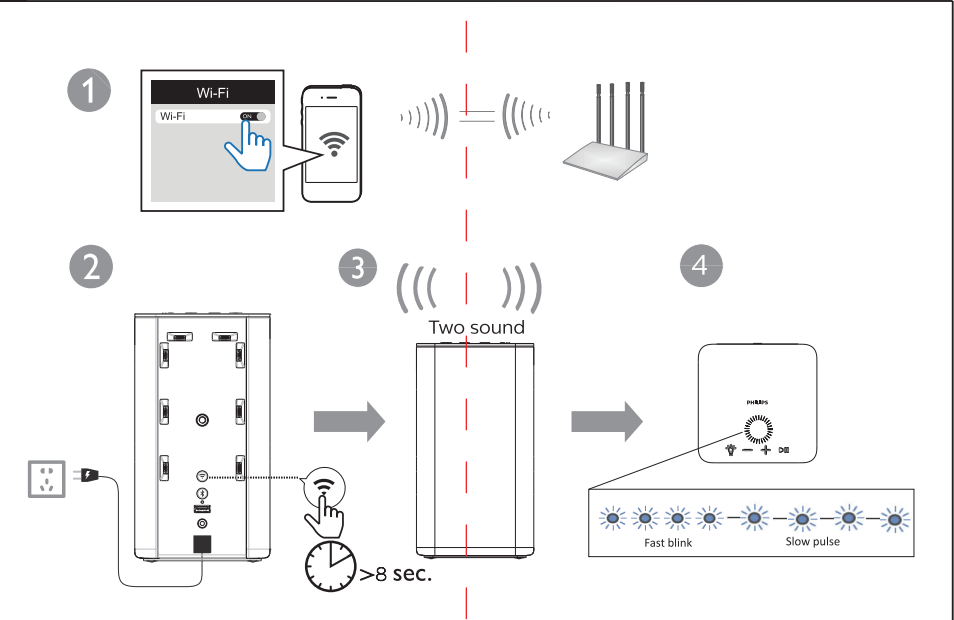

1 Wi-Fi

2


3 Two sound

4

Fast blink Slow pulse


>8 sec.

-7-



For iOS version only

-9-

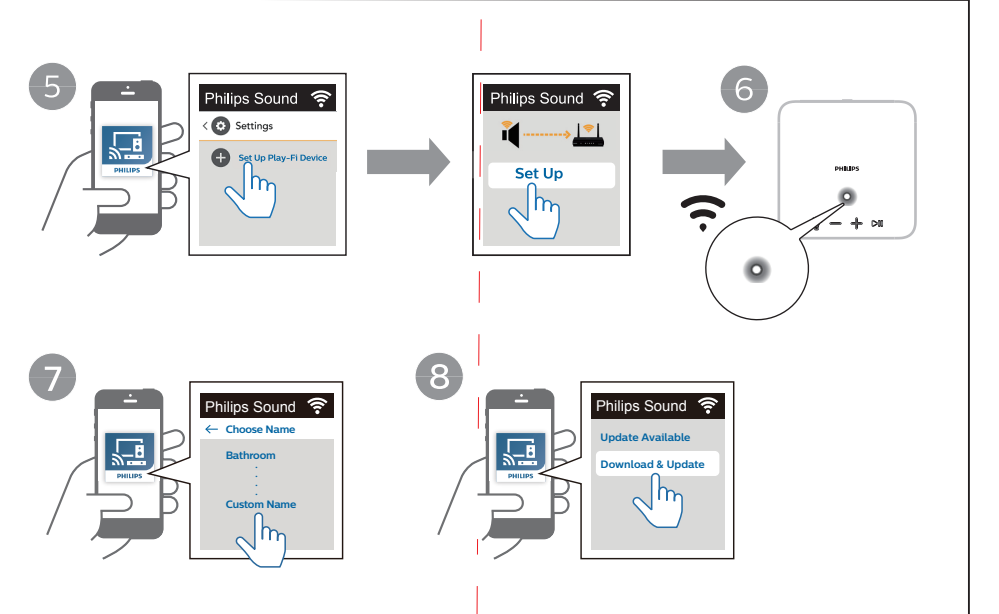

5 Philips Sound

6 Philips Sound

7 Philips Sound

8 Philips Sound

-10-

<p>EN Choose name SQ Zgjidh emrin AR جاس ارتخا BS Izaberite naziv BG Изберете име HR Odaberite ime CS Vyberte název DA Vælg navn NL Kies naam ET Vali nimi FI Valitse nimi FR Choisissez un nom DE Name wählen EL Επιλέξτε όνομα HU Névválasztás IT Scegli il nome KK Атауды тандау LV Izvēlieties nosaukumu LT Pasirinkti pavadinimą MK Избери име ME Odaberite naziv NO Velg navn PL Wybierz nazwę PT Seleccionar nome RO Alegeți numele RU Выберите название SR Odaberite naziv SK Vybrať meno SL Izberi ime ES Selección de nombre SV Välj namn TR İsim seçin UK Вибрати назву MS Pilih nama ID Pilih nama</p>	<p>EN Update Available SQ Një përditësim në dispozicion AR حاتم تيدي حشنتل BS Ažuriranje dostupno BG Налична е актуализация HR Dostupno ažuriranje CS K dispozici je aktualizace DA Opdatering tilgængelig NL Update beschikbaar ET Värskendus saadaval FI Päivitys saatavana FR Mise à jour disponible DE Update verfügbar EL Διαθέσιμη ενημέρωση HU Frissítés elérhető IT Aggiornamento disponibile KK Жанарту колжетимди LV Preejams atjauninājums LT Yra atnaujintas MK Ажурирање е достапно ME Ažuriranje je dostupno NO Oppdatering tilgjengelig PL Dostępna aktualizacja PT Atualização disponível RO Actualizare disponibilă RU Доступно обновление SR Ažuriranje je dostupno SK Dostupná aktualizácia SL Na voljo je posodobitev ES Actualización disponible SV Uppdatering tillgänglig TR Güncelleme Mevcut UK Доступне оновлення MS Kemas Kini Tersedia ID Pembaruan Tersedia</p>	<p>EN Download & Update SQ Shkarko dhe përditëso AR شحنتو وحدثه BS Preuzmi i ažuriraj BG Изтегляне и актуализиране HR Preuzmi i ažuriraj CS Stáhnout a aktualizovat DA Hent og opdater NL Download en update ET Laadi alla ja värskenda FI Lataus ja päivitys FR Télécharger et mettre à jour DE Herunterladen und aktualisieren EL Λήψη και ενημέρωση HU Letöltés és Frissítés IT Scarica e aggiorna KK Жүктөн ачу және жанарту LV Lejupielāde un atjaunināšana LT Atsiisiyti ir atnaujinti MK Презими и ажурирај ME Preuzmi i ažuriraj NO Last ned og oppdater PL Pobierz i zaktualizuj PT Transferir e atualizar RO Descărcați și actualizați RU Загрузить и обновить SR Preuzmite i ažurirajte SK Stiahnuť a aktualizovať SL Prenos in posodobitev ES Descargar y actualizar SV Ladda ned och uppdatera TR İndir & Güncelle UK Завантажити й оновити MS Muat Turun & Kemas Kini ID Unduh & Perbarui</p>	<p>EN Without the upgrade, not all product features can be available SQ Pa bërë përditësimin, jo të gjitha veçoritë mund të jenë të disponueshme. AR فوشرت رديب حشنتل تازيم عظيم رج رفوشت را نكسي ال BS Bez ažuriranja, ne mogu biti dostupne sve funkcije BG Без надграждането не всички функции на продукта ще бъдат налични HR Bez ažuriranja ne mogu biti dostupne sve značajke proizvoda CS Bez aktualizace nebude k dispozici všechny funkce výrobku DA Uden opgraderingen er det ikke alle produktfunktioner, der kan være tilgængelige NL Zonder de upgrade zijn mogelijk niet alle productfuncties beschikbaar ET Värskenduseta ei ole toote kõik funktsioonid saadaval FI Ilman päivitystä kaikki tuoteminaisuudet eivät ole saatavana FR Sans la mise à jour, les fonctions du produit peuvent ne pas être toutes disponibles DE Nur mit dem Update stehen alle Produktfunktionen zur Verfügung EL Χωρίς την αναβάθμιση, δεν θα είναι διαθέσιμες όλες οι λειτουργίες του προϊόντος HU Frissítés nélkül nem minden termékfunkció érhető el IT Senza l'aggiornamento, alcune funzioni del prodotto potrebbero non essere disponibili KK Жанартусыз, кейбир өнім мүмкіндиктери колжетимди болмауы мүмкүн LV Bez jaunināšanas ne visas izstrādājuma funkcijas var būt pieejamas LT Neatnaujinus, pasiekiamos ne visos gaminio funkcijos MK Bez nadgradbata, ne može da biđat dostapni site karakteristini na proizvodot ME Bez ažuriranja nisu dostupne sve funkcije NO Uten oppgraderingen vil noen av produktets funksjoner være utilgjengelige PL Bez aktualizacji nie wszystkie funkcje produktu będą dostępne PT Sem a atualização, nem todas as funcionalidades do produto poderão estar disponíveis RO Unele caracteristici ale produsului pot să nu fie disponibile dacă nu se realizează actualizarea RU Без обновления некоторые функции продукта будут недоступны SR Bez ažuriranja nisu dostupne sve funkcije SK Bez aktualizácie nie sú k dispozícii všetky funkcie produktu SL Brez posodobitve vse funkcije naprave ne bodo na voljo ES Sin la actualización, algunas funciones del producto pueden no estar disponibles SV Alla produktfunktioner finns ej tillgängliga utan uppdatering TR Güncelleme yapılmadan tüm özellikler mümkün olmaz UK Якщо не оновити, деякі функції виробу можуть бути недоступні. MS Tanpa naik taraf, tidak semua ciri-ciri produk boleh diperoleh ID Tanpa upgrade, tidak semua fitur produk akan tersedia</p>
--	--	---	--

展开尺寸 560*200MM ,成形尺寸 70*100mm ,80克书纸, 单黑双面印, 风琴折法.(红实线为裁切线, 红虚线为折痕线)

(成形折法示意图)

风琴折7折后上下对折1折

Light mode

Press once

Mode 1: Work with Ambilight

Mode 2: Mood light

Mode 3: Off

EN Light mode
SQ Modaliteti i dritës
AR وضع الإضاءة
BS Režim sa svetilom
BG Режим на светлината
HR Svetlosni način
CS Světelný režim
DA Lystilstand
NL Lichtmodus
ET Valgustusrežim
FI Valaistustila
FR Mode d'éclairage
DE Licht-Modus
HU Világos mód
IT Modalità illuminazione
KK Жарык режими
LV Gaismas režims
LT Šviesos režimas
MK Режим на осветленост
ME Režim sa svetilom
NO Lysmodus
PL Tryb światła
PT Modo de luz
RO Mod Lumină
RU Режим подсветки
SR Režim sa svetlom
SK Svetelný režim
SL Način osvetlitve
ES Modo de luz
SV Ljusläge
TR Işık modu
UK Режим підсвічування
MS Mod cahaya
ID Mode lampu

EN Mode 1: work with Ambilight
SQ Modaliteti 1: punë me Ambilight
AR الوضع 1: العمل باستخدام الإضاءة المحيطة
BS Režim 1: ambientalno svetlo
BG Режим 1: Работна с Амблийт
HR Način 1: rad s ambientalnom rasvetlom
CS Režim 1: práce s režimem Ambilight
DA Mode 1: arbejde med Ambilight
NL Modus 1: werk met Ambilight
ET Režim 1: töö ümbrisevalgusega
FI Tila 1: työssäkelte Ambilightin kanssa
FR Mode 1: avec Ambilight
DE Modus 1: Funktioniert mit Ambilight
HU Módus 1: működés az Ambilighttal
IT Modalità 1: funziona con Ambilight
KK 1-режим: Амблийт-нен жұмыс істейтін
LV 1. režims: darbs ar Ambilight
LT 1 režimas: darbas su „Ambilight“
MK Режим 1: работа со Амблийт
ME Režim 1: ambientalno svetlo
NO Modus 1: jobb med Ambilight
PL Tryb 1: dzialanie z Ambilight
PT Modo 1: funciona com Ambilight
RO Mod 1: Func. ionare cu Ambilight
RU Режим 1. Фондовая подсветка
SR Režim 1: ambientalno svetlo
SK 1. Režim: pracuje s osvetlením pozadia (Ambilight)
SL Način 1: ambientna osvetlitev
ES Modo 1: usar Ambilight
SV Läge 1: arbetar med Ambilight
TR Mod 1: Çevre ışığı ile çalışır
UK Режим 1. Робота з фоновим підсвічуванням
MS Mod 1: sesuai dengan Ambilight
ID Mode 1: bekerja dengan Ambilight

EN Mode 2: Mood Light
SQ Modaliteti 2: Drita e gjendjes shpirtërore
AR الوضع 2: الإضاءة الشعائرية
BS Režim 2: Zeljeno svetlo
BG Режим 2: Осветление за настроение
HR Način 2: rasvijeta raspoloženja
CS Režim 2: násvětla osvětlení
DA Mode 2: Humørlys
NL Modus 2: Sfeerlicht
ET Režim 2: meeleoluvalgustus
FI Tila 2: Tunnelmavalistus
FR Mode 2: ambiance
DE Modus 2: Stimmungslicht
HU Módus 2: Hangulatvilágítás
IT Modalità 2: Luce d'atmosfera
KK 2-режим: көңіл-күй жарығы
LV 2. režims: garastāvokļa apgaismojums
LT 2 režimas: apšvietimas pagal nuotaiką
MK Режим 2: осветленост според расположение
ME Režim 2: Zeljeno svetlo
NO Modus 2: Stemningsbelysning
PL Tryb 2: nastrojowe światło
PT Modo 2: Luz ambiente
RO Mod 2: Lumină stare
RU Режим 2. Декоративная подсветка
SR Režim 2: zeljeno svetlo
SK 2. Režim: Náladové osvetlenie
SL Način 2: razpoloženjska osvetitev
ES Modo 2: luz ambiental
SV Läge 2: Stämningbelysning (Mood Light)
TR Mod 2: Duygu ışığı
UK Режим 2. Атмосферне підсвічування
MS Mod 2: Cahaya Mood
ID Mode 2: Lampu Mood

EN Mode 3: Off
SQ Modaliteti 3: Fikur
AR الوضع 3: إيقاف
BS Režim 3: Isključeno
BG Режим 3: Исклучено
HR Način 3: Isključeno
CS Režim 3: vypnuto
DA Mode 3: Off
NL Modus 3: Uit
ET Režim 3: Väljas
FI Tila 3: Pois päältä
FR Mode 3: arrêt
DE Modus 3: Aus
HU Módus 3: ki
IT Modalità 3: Spento
KK 3-режим: өшіріні
LV 3. režims: izslēgts
LT 3 režimas: išjungta
MK Режим 3: isključeno
ME Režim 3: Isključeno
NO Modus 3: Av
PL Tryb 3: wył.
PT Modo 3: Desligado
RO Mod 3: Oprit
RU Режим 3. Выкл.
SR Režim 3: isključeno
SK 3. Režim: Vypnuté
SL Način 3: izključeno
ES Modo 3: desactivada
SV Läge 3: Av
TR Mod 3: Kapalı
UK Режим 3. Вимк.
MS Mod 3: Padam
ID Mode 3: Mati

Mode 1

Pairing with TV

EN Pairing with TV (follow TV set up instruction)
SQ Bashkim me televizorin (ndiqni udhëzimet e konfigurimit në televizor)
AR اتبع تعليمات إعداد التلفاز مع التلفاز
BS Uparivanje sa televizorom (pratite upute na televizoru)
BG Свързване с ТВ (следвайте инструкциите за настройване на ТВ)
HR Uparivanje s televizijom (pratite upute za postavljanje televizije)
CS Párování s TV (postupujte podle pokynů k nastavení TV)
DA Parring med tv (følg tv-instruktion)
NL Koppelen met tv (volg instructies voor instellen van tv)
ET Teleriga sidumine (lõrgi teleri seadistusjuhiseid)
FI Parimuodostus TV:n kanssa (noudata TV:n asennuksen ohjetta)
FR Jumelage avec le téléviseur (suivez les instructions de configuration du téléviseur)
DE Koppeln mit TV (bitte den Einrichtungsanweisungen des TV-Geräts folgen)
EL Ζεύξη με τηλεόραση (ακολουθήστε τις οδηγίες ρύθμισης τηλεόρασης)
HU Párosítás a TV-vel (kövesse a TV beállításának utasításait)
IT Abbinamento con la TV (seguire le istruzioni di configurazione della TV)
KK Теледидармен жуптастыру (теледидарды реттеу туралы нускаларды орындаңыз)
LV Savienošana pāri ar TV (sekot TV iestatīšanas instrukcijā)
LT Sijelimas su televizoriumi (pagal televizoriaus sąrankos instrukciją)
MK Sparivanje sa televizorom (sledi gi uputstva za postavljanje na televizorom)
ME Uparivanje sa televizorom (pratite uputstva na televizoru)
NO Sammenkoble med tv (følg TV-ens konfigureringsanvisninger)
PL Parowanie z telewizorem (postępuj zgodnie z instrukcją konfiguracji telewizora)
PT Emparelhar com a TV (seguir as instruções de instalação da TV)
RO Asociere cu TV (urma i instrucțiunile de configurare ale TV-ului)
RU Сопрежение с телевизором (следуйте инструкциям по настройке телевизора)
SR Uparivanje sa televizorom (pratite uputstva na televizoru)
SK Párovanie s televízorom (postupujte podľa pokynov nastavenia televízora)
SL Seznanjanje s TV sprejemnikom (navodila za sledenje TV)
ES Emparear con el televisor (sigue las instrucciones de configuración del televisor)
SV Para ihop med TV (Följ instruktionserna för TV-inställning)
TR TV ile eşleştirme (TV kurulum talimatlarını takip edin)
UK З'єднання з телевізором (дотримуйтеся інструкції телевізора)
MS Ganding dengan TV (ikut arahan penyediaan TV)
ID Menyambungkan dengan TV (ikuti petunjuk pengaturan TV)

Mode 1

Follow TV

Follow Music

EN Follow TV
SQ Ndiq televizorin
AR اتبع التلفاز
BS Pratite na televizoru
BG Следване на ТВ
HR Prati TV
CS Podlie hudby
DA Følg TV
NL Volg TV
ET Jälgi telerit
FI Seuraa TV:tä
FR Suivre la télévision
DE TV folgen
EL Ακολουθήστε τηλεόραση
HU TV követése
IT Follow TV
KK Теледидарды бакылау
LV Sekot TV
LT Sekti televizoriui
MK Следи телевизора
ME Pratite na televizoru
NO Følg TV
PL Sledź telewizor
PT Seguir a TV
RO Urmărire TV
RU В такт телевизору
SR Pratite na televizoru
SK Podľa televízora
SL Sledi TV sprejemniku
ES Seguir televisor
SV Följ TV
TR TV'yi takip et
UK Інструкції телевізора
MS Mengikut TV
ID ikuti TV

EN Follow Music
SQ Ndiq muzikën
AR اتبع الموسيقى
BS Pratite na uređaju
BG Следване на музиката
HR Prati glazbu
CS Podlie hudby
DA Følg musik
NL Volg Muziek
ET Jälgi muusikat
FI Seuraa musiikkia
FR Suivre la musique
DE Musik folgen
EL Ακολουθήστε μουσική
HU Zene követése
IT Follow Music
KK Музыканы бакылау
LV Sekot mūzikai
LT Sekti muzikai
MK Следи музика
ME Pratite na uređaju
NO Følg musikk
PL Sledź muzykę
PT Seguir a Música
RO Urmărire muzică
RU В такт музыке
SR Pratite na uređaju
SK Podľa hudby
SL Sledi glasbi
ES Seguir música
SV Följ musik
TR Müziği takip et
UK Інструкції музико
MS Mengikut Muzik
ID ikuti Musik

Change color

Press and once. Select next color

Warm White Orange
Hot Lava Lemon
Deep Water Lavender
Green Nature

Change brightness

Press and once:

Press and once:

EN Change color
SQ Ndrysho ngjyrën
AR تغير اللون
BS Promijeniti boju
BG Смена на цвета
HR Promijeniti boju
CS Změnit barvu
DA Skift farve
NL Verander kleur
ET Muuda värv
FI Valhda väriä
FR Change de couleur
DE Farbe wechseln
EL Αλλάξη χρώματος
HU Szín megváltoztatása
IT Cambia colore
KK Тусти өзгөртүү
LV Mainīt krāsu
LT Keisti spalvą
MK Смени боја
ME Promijenite boju
NO Bytt farge
PL Zmień kolor
PT Mudar de cor
RO Modificare culoare
RU Изменить цвет
SR Promienite boju
SK Zmenit farbu
SL Spremeni barvo
ES Cambiar color
SV Ändra färg
TR Rengi değiştir
UK Змінити колір
MS Mengubah warna
ID Ubah warna

EN Press and once to select next color
SQ Shtypni dhe një herë për të zgjedhur ngjyrën tjetër
AR اضغط و مرة واحدة لاختيار اللون التالي
BS Pritisnite i za izbor sljedeće boje
BG Натиснете и веднъж, за да изберете следващия цвят
HR Pritisnite i jednom da biste prebacili na sljedeću boju
CS Jednou stiskněte a a vyberte další barvu
DA Tryk og én gang for at vælge næste farve
NL Druk op en om de volgende kleur te selecteren
ET Vajuta ja järgmise värvu valimiseks
FI Paina ja kerran valitaksesi seuraavaan väriin
FR Appuyer une fois sur et pour choisir la couleur suivante
DE Einmal und drücken, um die nächste Farbe auszuwählen
EL Πατήστε το και το μία φορά για να επιλέξετε το επόμενο χρώμα
HU Nyomja meg a és gombokat a következő szín beállítását után
IT Premere e una volta per selezionare il colore successivo
KK Келеси түсти тизилүү үчүн жана түймелерин бир рет баскыңыз
LV Nospiediet un vienu reizi, lai izvēlētos nākamā krāsu
LT Vieną kartą spausti ir , kad pasirinkti kita spalva
MK Еднаш притисни и да избереш следна боја
ME Pritisnite i za izbor sljedeće boje
NO Trykk på og én gang for å velge neste farge
PL Naciśnij i raz, aby wybrać kolor
PT Prima uma vez para selecionar a cor seguinte
RO Apasă și o dată pentru a selecta culoarea următoare
RU Нажмите и один раз, чтобы выбрать следующий цвет
SR Pritisnite i za izbor sledeće boje
SK Stlačte a jeden krát pre výber ďalšej farby
SL Za izbiro naslednje barve enkrat pritisnite in
ES Púlsa y una vez para seleccionar el color siguiente
SV Tryck på och en gång för att välja nästa färg
TR Sonraki rengi seçmek için bir kez ve düğmelerine basın.
UK Натисніть один раз та , щоб вибрати наступний колір
MS Tekan dan sekali untuk pilih warna seterusnya
ID Tekan dan satu kali untuk memilih warna berikutnya

EN Change brightness
SQ Ndrysho ndriçimin
AR تغير درجة السطوح
BS Promijeniti osvijetljenje
BG Промяна на яркостта
HR Promjena svjetline
CS Změnit jas
DA Ændre lysstyrke
NL Verander de helderheid
ET Muuda eredust
FI Valhda kirkkautta
FR Régler la luminosité
DE Helligkeit ändern
EL Αλλάξη φωτεινότητας
HU Fényerő módosítása
IT Cambia la luminosità
KK Жарыктык өзгөртүү
LV Mainīt spilgtumu
LT Keisti ryškumą
MK Смени осветленост
ME Promijeniti osvijetljenje
NO Ændre lysstyrke
PL Zmień jasność
PT Alterar luminosidade
RO Modificare luminozitate
RU Изменить яркость
SR Promijeniti osvijetljenje
SK Zmenit jas
SL Spremeni svetlost
ES Cambiar brillo
SV Ändra ljusstyrka
TR Parlaklığı değiştir
UK Змінити яскравість
MS Mengubah kecerahan
ID Ubah kecerahan

Bluetooth

MP3

Warnings