

Sound Bar

Reference Guide	EN
Guide de référence	FR
Довідковий посібник	UA
دليل مرجعي	AR



https://rd1.sony.net/help/ht/2088/h_zz/

©2025 Sony Corporation
Printed in Vietnam
https://www.sony.net/

BRAVIA Theatre Bar 6

Model: YY2088C

English

Sound Bar

Model: YY2088C

The term "product" in this document refers to the unit or its accessories.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on the product.

The unit is not disconnected from e AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

CAUTION

Do not cover ventilation openings.

This unit is not intended to be used on soft surfaces (like bedding, blankets etc.).

For Remote Commander

CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to local rules and regulations.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

This product has magnet[s] which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are attached in the following locations:

- the bottom of the unit


This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

How To Use

Installation, connection, and initial settings of the unit must be performed in accordance with the "Sony | BRAVIA Connect" app installed on your smartphone. For more information on how to use the unit, access the Help Guide from the URL on the cover of this document.

Mounting on a Wall

Refer to the **Help Guide from the URL on the cover of this document for more details and other installation method.**

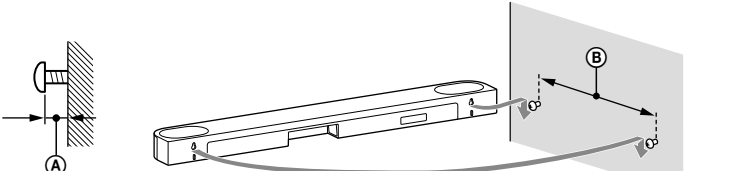

- Ⓐ Gap between the wall installation screw (not supplied) head and wall: 8.5 mm to 9.5 mm
- Ⓑ Distance between the screws for wall installation: 801 mm

- Notes**
- Hang the bar speaker horizontally on a reinforced wall.
 - Ask a Sony dealer or licensed contractor to install the speakers securely and with full consideration of safety.
 - Sony shall not be held responsible for any accidents or damage caused by improper installation, lack of installation stability, misuse, or natural disaster.
 - For safety, at least two persons should work together to mount the bar speaker.
 - Prepare screws (not supplied) suitable for the wall material and hardness. Depending on the wall material, screws that are not suitable may damage the wall.
 - Fasten the screws securely into the wall beam.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
https://rd1.sony.net/help/ht/si/25/
- The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL.
You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL.
This offer is valid to anyone in receipt of this information.
https://oss.sony.net/Products/Linux/
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.
- For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Precautions

- On the power cord**
- The supplied AC power cord (mains lead) is designed exclusively for this unit. It should not be used in combination with any other devices.
 - Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
 - AC power cord (mains lead) must be changed only at a qualified service shop.

- On placement**
- Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
 - Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
 - Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
 - The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit or near it.
 - Do not place metal objects other than a TV around the unit. Wireless functions may be unstable.

- How to care for the unit**
- You can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.
- Clean the unit with a soft, dry cloth. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzene.

- On BLUETOOTH® communications**
- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident:
 - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.

- Other notes**
- Place the unit in a location with adequate ventilation to prevent heat buildup and prolong the life of the unit.
 - Do not splash water onto this product and the supplied accessories. Those are not waterproof.
 - Do not insert foreign objects from the opening of the speaker unit.
 - Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
 - If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Trademarks

- The BLUETOOTH™ word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- The terms HDMI™, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Specifications

Bar speaker (YY2088C1)

Amplifier section

POWER OUTPUT (rated)

Front L + Front R speaker blocks: 40 W + 40 W (at 6 Ω, 1 kHz 1% THD)

Center speaker block: 40 W (at 6 Ω, 1 kHz 1% THD)

Top L + Top R speaker blocks: 40 W + 40 W (at 6 Ω, 1 kHz 1% THD)

POWER OUTPUT (reference)

Front L/Front R speaker blocks: 50 W (per channel at 6 Ω, 1 kHz)

Center speaker block: 50 W (at 6 Ω, 1 kHz)

Top L/Top R speaker blocks: 50 W (per channel at 6 Ω, 1 kHz)

BLUETOOTH section

Frequency band

2.4 GHz band (2,400 0 GHz - 2,483 5 GHz)

USB section

• (USB) port

Type A (For software update only)

HDMI section

Connector

Type A (19pin)

General

Power

120 V - 240 V AC, 50 Hz/60 Hz

Power consumption

On: 35 W

Network standby mode ([Bluetooth Standby] is set to ON): 2.0 W or less

Standby mode ([Bluetooth Standby] is set to OFF): 0.5 W or less

When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the bar speaker automatically enters the network standby mode or standby mode.

Disabling the [Auto Standby] function will increase the power consumption of this product.

Dimensions (W x H x D)

Not including projection portion

Bar speaker: Approx. 950 mm × 64 mm × 110 mm

Bar speaker with the Foot: Approx. 950 mm × 77 mm × 110 mm

Mass

Bar speaker: Approx. 3.1 kg

Bar speaker with the Foot: Approx. 3.1 kg

Subwoofer (YY2088C2)

Amplifier section

POWER OUTPUT (reference)

100 W (at 4 Ω, 100 Hz)

General

Power

120 V - 240 V AC, 50 Hz/60 Hz

Power consumption

On: 20 W

Network standby mode (power indicator is lit in red): 2.0 W or less

Turned off (power indicator is off): 0.3 W or less

When you press and hold the LINK for 2 seconds or more and then release your finger, the speaker shifts to the power off mode and the power indicator is turned off. Press the LINK to use the speaker again.

When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the subwoofer automatically enters the network standby mode.

Disabling the [Auto Standby] function will increase the power consumption of this product.

Dimensions (W x H x D)

Not including projection portion

Approx. 210 mm × 388 mm × 388 mm

Mass

Approx. 7.7 kg

Wireless transmitter/receiver section

Frequency band

2.4 GHz band (2,400 0 GHz - 2,483 5 GHz)

Included items

- Bar speaker (1)
- Subwoofer (1)
- Remote control (1)
- Battery (2)
- WALL MOUNT TEMPLATE (Paper) (1)
- Foot (2)
- Screw (2)
- HDMI cable (1)
- AC power cord (mains lead) (4)
- Documents (1 set)

Design and specifications are subject to change without notice.

You can find the product specifications, including information about energy saving if applicable, by visiting the following link, choosing your country/region, opening the page for your product, and then going to the specifications section: [sony.com/country](https://www.sony.com/country)

Français

Barre de son

Modèle : YY2088C

Dans ce document, le terme « produit » désigne l'appareil ou ses accessoires.

N'installez pas le produit dans un espace clos, comme une bibliothèque ou une armoire encastrée.

Afin de réduire le risque d'incendie, ne couvrez pas l'orifice de ventilation de l'appareil avec des journaux, des nappes, des rideaux, etc. N'exposez pas l'appareil à des sources de flamme nue (bougies allumées, par exemple).

Afin de réduire le risque d'incendie ou de choc électrique, n'exposez pas ce produit à des gouttes ou à des éclaboussures et ne placez aucun objet rempli de liquide, tel qu'un vase, sur le produit.

L'appareil n'est pas déconnecté de la source d'alimentation CA tant qu'il reste branché à la prise murale, même s'il a été mis hors tension.

Installez l'appareil de sorte que le cordon d'alimentation puisse être débranché de la prise murale de façon immédiate en cas de problème.

ATTENTION

Ne couvrez pas les orifices de ventilation.

Cet appareil n'est pas destiné à être utilisé sur des surfaces souples (literie, couvertures, etc.).

Pour la télécommande

ATTENTION

Risque d'explosion si vous remplacez la pile par un type incorrect.

Mettez les piles usagées au rebut en suivant les règles et réglementations locales.

N'exposez pas les piles (bloc-batterie ou piles installées) à une chaleur excessive, telle que le soleil, un feu ou autre, pendant une longue période.

Ce produit comporte un ou des aimants qui peuvent perturber les stimulateurs cardiaques, les valves de dérivation programmables pour le traitement de l'hydrocéphalie ou d'autres appareils médicaux. Ne placez pas ce produit près de personnes utilisant ce type d'appareil médical. Consultez votre médecin avant d'utiliser ce produit si vous utilisez ce type d'appareil médical.

La plaque signalétique et les informations importantes concernant la sécurité sont fixées à l'endroit suivant:

- bas de l'appareil


Cet appareil a été testé et déclaré comme conforme aux limites de la réglementation CEM en utilisant un câble de connexion de moins de 3 m.

Utilisation

L'installation, la connexion et le paramétrage initial de l'appareil doivent être effectués conformément aux instructions de l'application « Sony | BRAVIA Connect » installée sur votre smartphone. Pour toute information complémentaire sur l'utilisation de l'appareil, veuillez consulter le Guide d'aide disponible à l'adresse mentionnée sur la couverture du document.

Fixation sur un mur

Consultez le **Guide d'aide disponible à l'adresse mentionnée sur la couverture de ce document pour obtenir des informations complémentaires sur une autre méthode d'installation.**

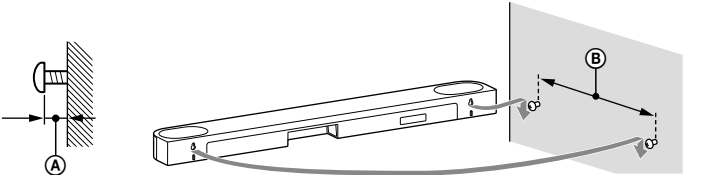

- Ⓐ Écart entre la tête de la vis d'installation murale (non fournie) et le mur : 8,5 mm à 9,5 mm
- Ⓑ Distance entre les vis pour l'installation murale : 801 mm

- Remarques**
- Suspendez l'enceinte-barre horizontalement sur un mur renforcé.
 - Demandez à un revendeur Sony ou à un installateur agréé d'installer les enceintes de manière sécurisée et en tenant compte de la sécurité.
 - Sony ne peut être tenue responsable de tout accident ou dommage causé par une installation incorrecte, un manque de stabilité de l'installation, une mauvaise utilisation ou une catastrophe naturelle.
 - Pour des raisons de sécurité, au moins deux personnes doivent travailler ensemble pour installer l'enceinte-barre.
 - Préparez des vis (non fournies) adaptées au matériau et à la dureté du mur. Des vis inadaptées risquent d'endommager le mur en fonction de son matériau.
 - Attachez les vis de manière sécurisée dans la poutre murale.

Licences

- Ce produit contient des logiciels utilisés par Sony dans le cadre d'un contrat de licence conclu avec le propriétaire de ses droits d'auteur. Nous sommes tenu d'annoncer le contenu du contrat aux clients, conformément à l'accord passé avec le propriétaire des droits d'auteur du logiciel. Veuillez cliquer sur le lien et lire le contenu de la licence.
https://rd1.sony.net/help/ht/si/25/
- Le logiciel inclus dans ce produit contient un logiciel protégé par le droit d'auteur et couvert par une licence GPL/LGPL et d'autres licences qui peuvent nécessiter un accès au code source. Conformément à la GPL/LGPL, vous trouverez une copie du code source correspondant (et d'autres licences) à l'adresse suivante.
Conformément à la GPL/LGPL, vous pouvez obtenir le code source sur un support physique, pendant une période de trois ans suivant la sortie de la dernière version de ce produit, en formulant votre demande à l'adresse suivante.
Cette offre est valable pour toute personne recevant ces informations.
https://oss.sony.net/Products/Linux/
Veuillez noter que Sony ne peut pas répondre aux demandes de renseignements portant sur le contenu du code source.
- Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.
- For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.
- Les services proposés par des tiers peuvent être modifiés, suspendus ou clôturés sans avis préalable. Sony n'assume aucune responsabilité dans ce genre de situation.

Précautions

Cordon d'alimentation

- Le cordon d'alimentation secteur fourni est conçu uniquement pour cet appareil. Il ne doit pas être utilisé avec tout autre appareil.
- Débranchez le cordon d'alimentation secteur de la prise secteur si vous n'envisagez pas d'utiliser l'appareil pendant une période prolongée. Lorsque vous débranchez le cordon d'alimentation secteur, saisissez-le toujours par sa fiche. Ne tirez jamais sur le cordon lui-même.
- Le cordon d'alimentation secteur ne doit être remplacé que dans un centre de service après-vente qualifié.

- Installation**
- Ne placez pas l'appareil à proximité d'une source de chaleur ou dans un endroit exposé aux rayons du soleil, à une poussière excessive ou à des chocs mécaniques.
 - Installez cet appareil sur une surface plane et horizontale. Lorsqu'il est placé sur une surface inclinée, l'appareil peut se renverser ou tomber en raison de ses propres vibrations, et entraîner des blessures, des dysfonctionnements ou une dégradation des performances.
 - Soyez vigilant lorsque vous placez l'appareil sur une surface qui a subi un traitement spécial (avec de la cire, de l'huile, du polish, etc.), car cela risque de tacher ou de décolorer la surface.
 - Les enceintes de cet appareil ne comportent aucun blindage magnétique. Ne posez pas de cartes magnétiques sur l'appareil ou à proximité de celui-ci.
 - Ne placez aucun objet métallique autre qu'un téléviseur à proximité de l'appareil. Les fonctions sans fil peuvent être instables.

Entretien de l'appareil

Vous pouvez utiliser cet appareil plus confortablement et prolonger sa durée de vie en suivant la procédure d'entretien ci-dessous.

- Nettoyez l'appareil à l'aide d'un chiffon doux et sec. N'utilisez aucun type de tampon abrasif, ni de poudre décapante, ni de solvant tel que de l'alcool ou du benzène.

À propos des communications BLUETOOTH®

- Les micro-ondes émises par un dispositif BLUETOOTH peuvent perturber le fonctionnement des dispositifs médicaux électroniques. Mettez hors tension cet appareil et les autres dispositifs BLUETOOTH dans les endroits suivants, car ils peuvent provoquer un accident :
 - dans les hôpitaux, à proximité des places réservées aux personnes à mobilité réduite à bord des trains, dans des locaux susceptibles de contenir des gaz inflammables, à proximité des portes automatiques ou d'alarmes incendie.

- Autres remarques**
- Placez l'appareil dans un endroit suffisamment ventilé pour éviter l'accumulation de chaleur et prolonger la durée de vie de l'appareil.
 - Évitez les éclaboussures d'eau sur ce produit et sur les accessoires fournis. Ils ne sont pas étanches.
 - N'insérez aucun corps étranger dans l'ouverture de l'enceinte.
 - Si un objet ou un liquide pénètre dans l'appareil, débranchez-le et faites-le vérifier par un technicien qualifié avant de continuer à l'utiliser.
 - Pour toute question ou tout problème concernant cet appareil n'apparaissant pas dans ce manuel, consultez votre revendeur Sony le plus proche.

Marques

- La marque et les logos BLUETOOTH® sont des marques commerciales déposées appartenant à Bluetooth SIG, Inc. et toute utilisation de ces marques par Sony Group Corporation et ses filiales est sous licence.
- Les termes HDMI™, interface multimédia haute définition HDMI et habillage commercial HDMI, et les logos HDMI sont des marques commerciales et des marques déposées de HDMI Licensing Administrator, Inc.
- Toutes les autres marques et marques déposées sont des marques ou des marques déposées de leurs détenteurs respectifs. Les symboles ™ et ® n'apparaissent pas dans ce manuel.

Spécifications

Enceinte-barre (YY2088C1)

Section amplificateur

PUISSANCE DE SORTIE (nominale)

Blocs d'enceintes Avant G + Avant D : 40 W + 40 W (sous 6 Ω, 1 kHz 1% DHT)

Bloc d'enceintes centrales : 40 W (sous 6 Ω, 1 kHz 1% DHT)

Blocs d'enceintes hautes G + D : 40 W + 40 W (sous 6 Ω, 1 kHz 1% DHT)

PUISSANCE DE SORTIE (référence)

Blocs d'enceintes avant G/D : 50 W (par canal sous 6 Ω, 1 kHz)

Bloc d'enceintes centrales : 50 W (sous 6 Ω, 1 kHz)

Blocs d'enceintes hautes G/D : 50 W (par canal sous 6 Ω, 1 kHz)

Section BLUETOOTH

Bande de fréquences

Bande 2,4 GHz (2,400 0 GHz - 2,483 5 GHz)

Section USB

Port • (USB)

Type A (pour la mise à jour du logiciel uniquement)

Section HDMI

Connecteur

Type A (19 broches)

Général

Alimentation

120 V - 240 V CA, 50 Hz/60 Hz

Consommation électrique

En fonctionnement : 35 W

Mode Mise en veille réseau ([Mise en veille Bluetooth] est réglé sur ON) : 2.0 W ou moins

Mode Mise en veille ([Mise en veille Bluetooth] est réglé sur OFF) : 0.5 W ou moins

Lorsque la fonction [Mise en veille automatique] est activée, si le produit n'est pas utilisé et qu'aucun signal n'est reçu en entrée pendant 20 minutes environ, l'enceinte-barre entre automatiquement en mode Mise en veille réseau ou en mode Mise en veille.

La désactivation de la fonction [Mise en veille automatique] augmentera la consommation électrique de ce produit.

Dimensions (l x h x p)

N'inclut pas la partie saillante

Enceinte-barre : Env. 950 mm × 64 mm × 110 mm

Enceinte-barre avec pied : Env. 950 mm × 77 mm × 110 mm

Poids

Enceinte-barre : Env. 3,1 kg

Enceinte-barre avec pied : Env. 3,1 kg

Caisson de graves (YY2088C2)

Section amplificateur

PUISSANCE DE SORTIE (référence)

100 W (sous 4 Ω, 100 Hz)

Général

Alimentation

120 V - 240 V CA, 50 Hz/60 Hz

Consommation électrique

En fonctionnement : 20 W

Mode Mise en veille réseau (le témoin d'alimentation est allumé en rouge) : 2.0 W ou moins

Désactivé (le témoin d'alimentation est éteint) : 0.3 W ou moins

Lorsque la fonction [Mise en veille automatique] est activée, si le produit n'est pas utilisé et qu'aucun signal n'est reçu en entrée pendant 20 minutes environ, le caisson de graves entre automatiquement en mode Mise en veille réseau.

La désactivation de la fonction [Mise en veille automatique] augmentera la consommation électrique de ce produit.

Dimensions (l x h x p)

N'inclut pas la partie saillante

Env. 210 mm × 388 mm × 388 mm

Poids

Env. 7,7 kg

Section émetteur/récepteur sans fil

Bande de fréquences

Bande 2,4 GHz (2,400 0 GHz - 2,483 5 GHz)

Éléments fournis

- Enceinte-barre (1)
- Caisson de graves (1)
- Télécommande (1)
- Pile (2)
- CALIBRE DE MONTAGE MURAL (papier) (1)
- Pied (2)
- Vis (2)
- Câble HDMI (1)
- Cordon d'alimentation secteur (4)
- Documents (1 jeu)

La conception et les spécifications peuvent être modifiées sans avis préalable.

Pour accéder aux caractéristiques techniques du produit, y compris, le cas échéant, aux informations relatives aux économies d'énergie, utilisez le lien suivant, choisissez votre pays/région, ouvrez la page dédiée à votre produit et accédez à la section des caractéristiques techniques : [sony.com/country](https://www.sony.com/country)

