

# Hardware Installation


**Note** The product model shown in this QIG is TL-PS110U, as an example.

## Before you start, you should prepare the following items

- Windows 2000/XP/2003/Vista/7 computer with print server setup CD
- One Printer
- One Printer cable
- One Router

## Hardware Installation

1. Turn off the printer's power.
2. Connect the print server to your printer with the supplied printer cable. Connect the print server to your Router with the RJ45 cable. The image beside is the classic infrastructure topology for reference:

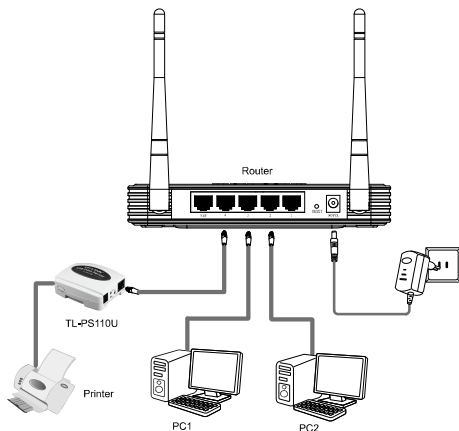

3. Turn the printer's power on.
4. Plug the AC power adapter into the power connector on the print server.
5. Wait 40 seconds as part of the print server's Power On Self Test (POST).

## Factory Default Settings

- Username: admin
- IP Address: 192.168.0.10
- Subnet Mask: 255.255.255.0

**Note** The TL-PS110U is produced without password by default.

# Software Installation


## 1

## Configuring the Printer Server

### 1 Select the Print Server

Insert the provided CD into your computer's CD drive, the Setup Wizard will automatically pop up on your computer's screen.

Select **TL-PS110U**

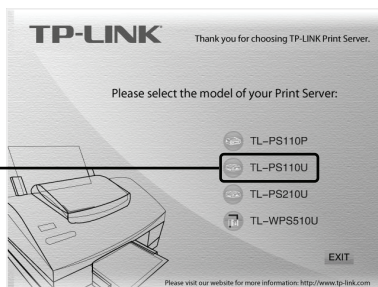

**Note** If you don't have a CD-ROM, you can click to our web site (<http://www.tplink.com/support/download.asp>) and download the PrintServer\_Setup\_Wizard.


Click **Setup Wizard**





Click Next


On the **Select A Print Server** screen, TL-PS110U will be detected as "1P\_PrintServXXX".

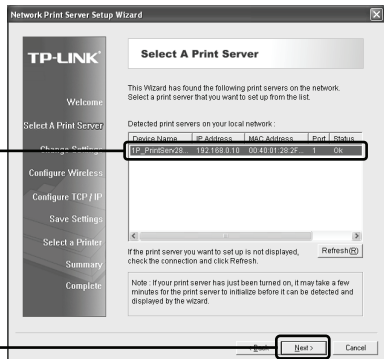

Select the print server

Click Next

## 2 Configure the Print Server

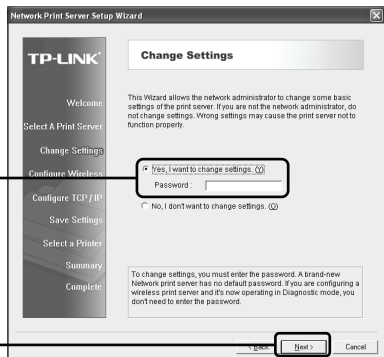


Please select **Yes**. Leave the Password **blank**

Click Next

Assign a static IP to your Print Server. The IP should be within the same subnet of your Router

Click **Next**

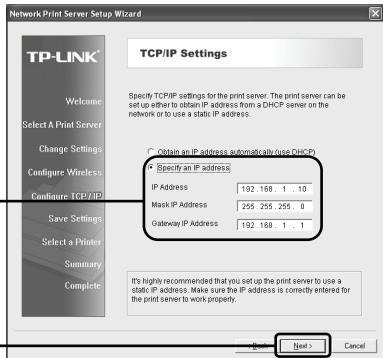


**Note** The IP address of the print server must be within **the same subnet** with your Router, for example:


Network device	IP address
Router/Gateway	192.168.1.1
Print server	192.168.1.10

**Note** Remember the IP address of the Print Server, because you may log into the Print Server by this IP next time.

Confirm the settings

Click **Next**

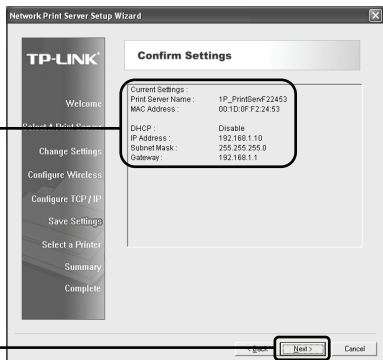

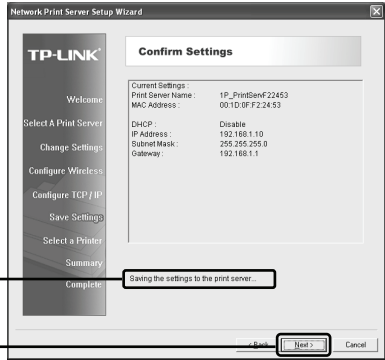

PSWizard is saving the configurations to the print server


Click **Next**

## 2

## Configuring the Printer


This page will then display.

If your printer has already appeared in the Printer Name list, please follow the **instruction 1**. Otherwise please follow the **instruction 2**.

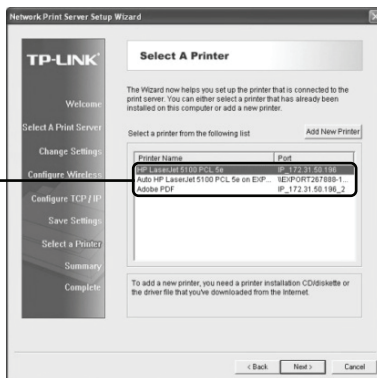

### 1

Select an existing printer by the printer name

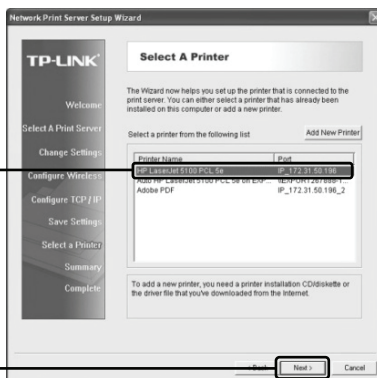


Click **Next**, and then follow the step by step instructions to complete the installation

You have now installed the print server and the printer successfully. You can print through the network.

**Note** The print server needs to be configured only once, other users who want to share the printer only need to install the printer's driver and configure the TCP/IP port on their computers. Please refer to the User Guide on the resource CD.


Click Add New Printer

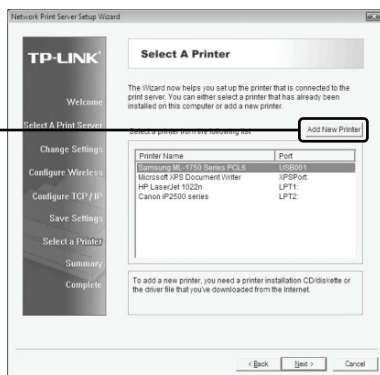

Click Next




Select Local printer attached to this computer

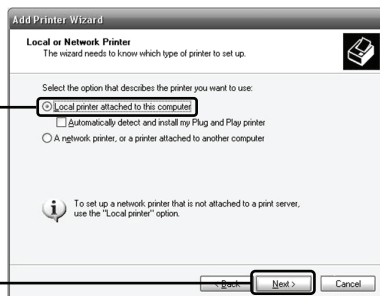

Click Next


Tick **Use the following port and select LPT1: (Recommended Printer Port)** from the pull-down list

Click **Next**

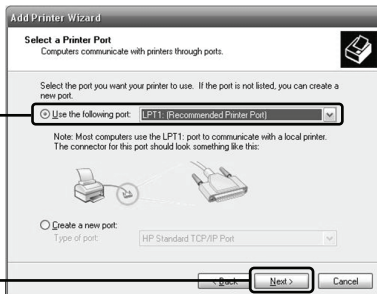

Select the manufacturer and model of your printer


Click **Next**

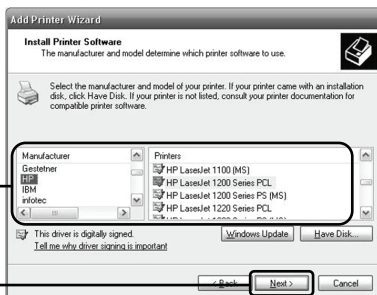



**Note** If you already have the printer's driver installed, you will be asked whether to keep or replace it. Please select replace it.

Enter a name for your printer

Click **Next**

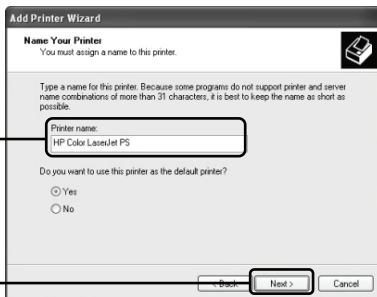



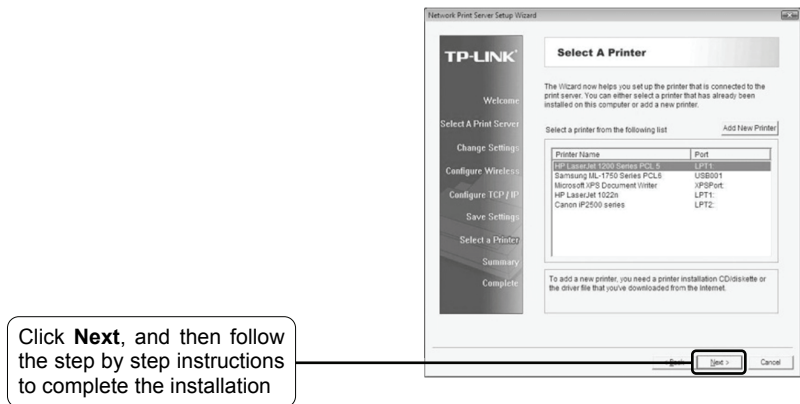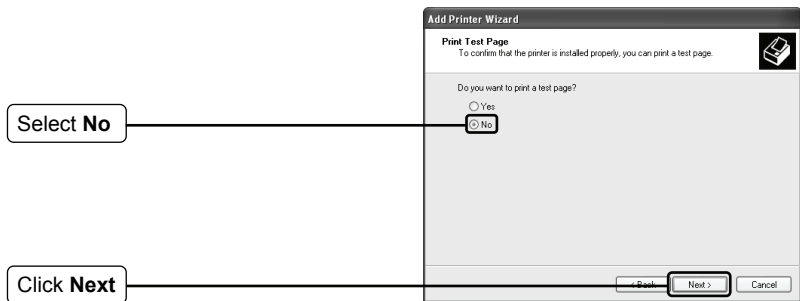

You have now installed the print server and the printer successfully. You can print through the network.

**Note** The print server needs to be configured only once, other users who want to share the printer only need to install the driver of the printer and configure the TCP/IP port on their computers. Please refer to the User Guide on the resource CD.

# Technical Support

- For more troubleshooting help, go to:  
**[www.tp-link.com/support/faq.asp](http://www.tp-link.com/support/faq.asp)**
- To download the latest Firmware, Driver, Utility and User Guide, go to:  
**[www.tp-link.com/support/download.asp](http://www.tp-link.com/support/download.asp)**
- For all other technical support, please contact us by using the following details:

## Global

Tel: +86 755 26504400

E-mail: [support@tp-link.com](mailto:support@tp-link.com)

Service time: 24hrs, 7days a week

## Singapore

Tel: +65 62840493

E-mail: [support.sg@tp-link.com](mailto:support.sg@tp-link.com)

Service time: 24hrs, 7days a week

## UK

Tel: +44 (0) 845 147 0017

E-mail: [support.uk@tp-link.com](mailto:support.uk@tp-link.com)

Service time: 24hrs, 7days a week

## Switzerland

Tel: +41 (0)848 800998 (German service)

E-mail: [support.ch@tp-link.com](mailto:support.ch@tp-link.com)

Fee: 4-8 Rp/min, depending on rate of different time

Service Time: Monday to Friday

9:00 AM to 6:00 PM. GMT+1 or

GMT+2 (Daylight Saving Time)

## Australia & New Zealand

Tel: AU 1300 87 5465

NZ 0800 87 5465

E-mail: [support@tp-link.com.au](mailto:support@tp-link.com.au)

Service time: Monday to Friday

9:00 AM to 9:00 PM AEST

## USA/Canada

Toll Free: +1 866 225 8139

E-mail: [support.usa@tp-link.com](mailto:support.usa@tp-link.com)

Service time: 24hrs, 7days a week

## Germany/Austria

Tel: +49 1805 875465 (German Service) / +49 1805 TPLINK

E-mail: [support.de@tp-link.com](mailto:support.de@tp-link.com)

Fee: 0.14 EUR/min from the German fixed phone network and up to 0.42 EUR/min from mobile phone.

Service Time: Monday to Friday

9:00 AM to 6:00 PM. GMT+1 or

GMT+2 (Daylight Saving Time in

Germany)

\* Except bank holidays in Hesse